

Slide 1




The advertisement features a dark teal background with a semi-transparent image of a business meeting. In the top left corner is the Sharp 'mV' logo with 'SHARP' in red below it. The headline 'Delete a Button.' is in white text. On the right is a large image of a Sharp MX Series multifunction copier. At the bottom left, two columns of model numbers are listed under the headings 'ESSENTIALS' and 'ADVANCED'.

mV™
SHARP


Delete a Button.

ESSENTIALS	ADVANCED
MX-2651	MX-3071
MX-3051	MX-3571
MX-3551	MX-4071
MX-4051	

Slide 2

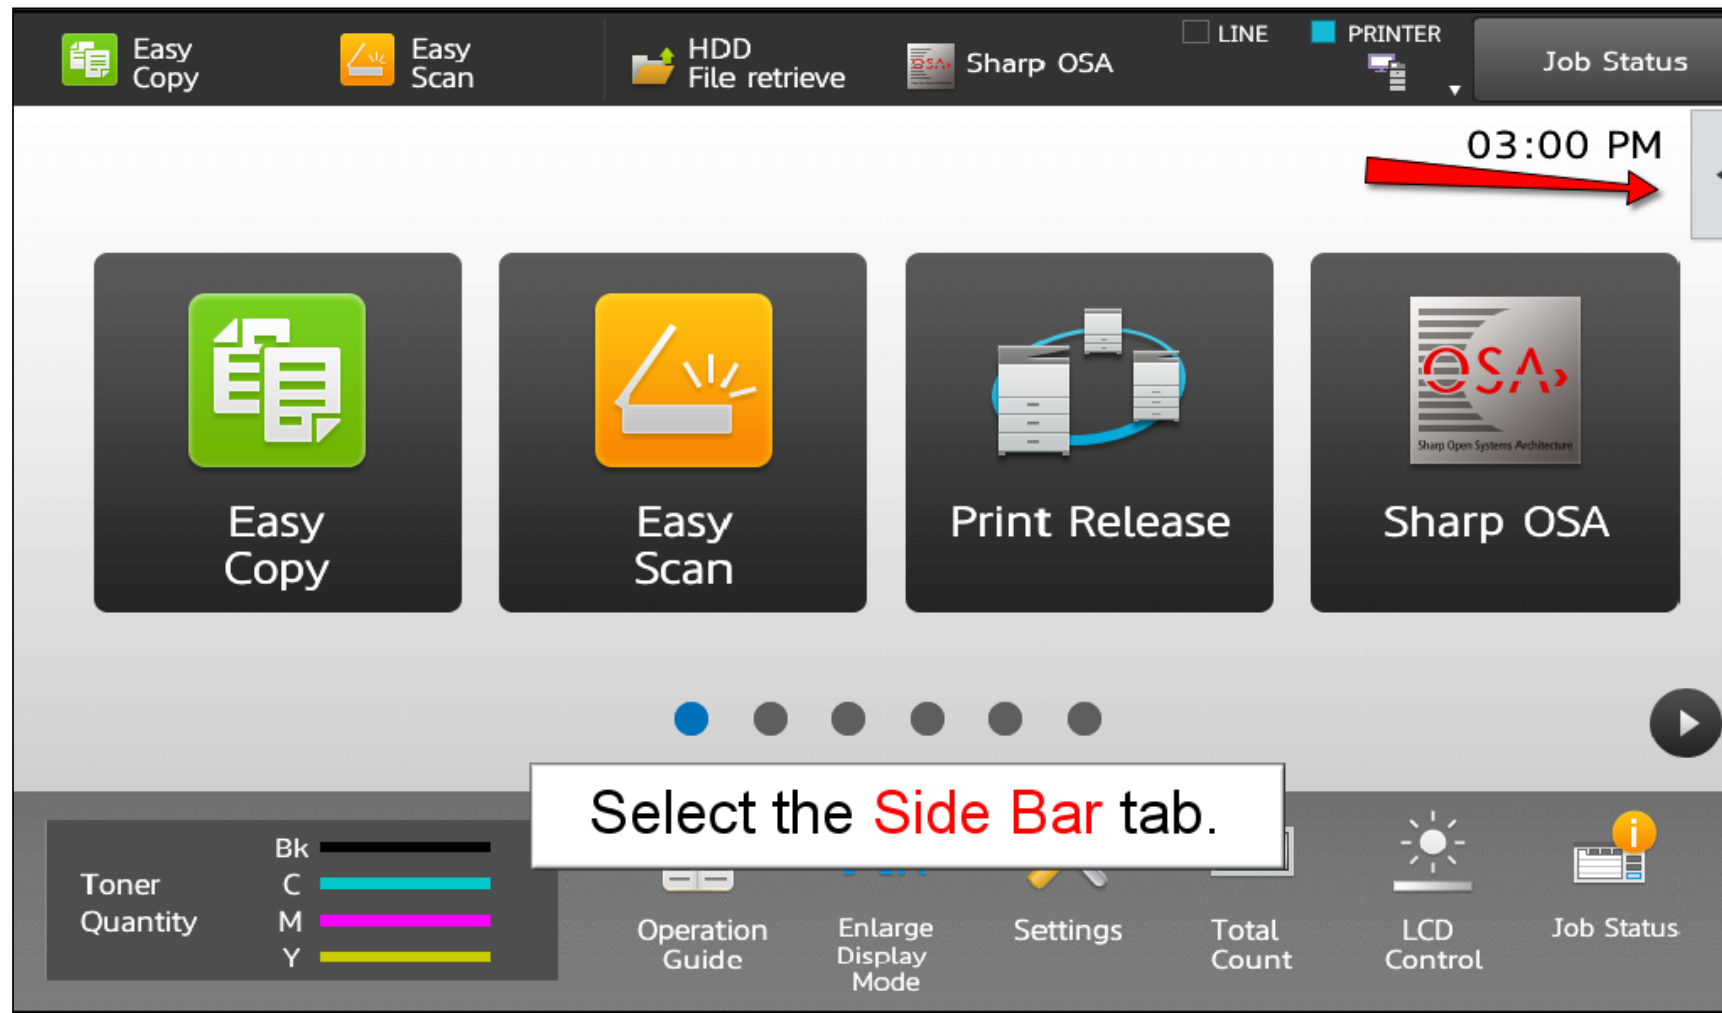

Slide 3

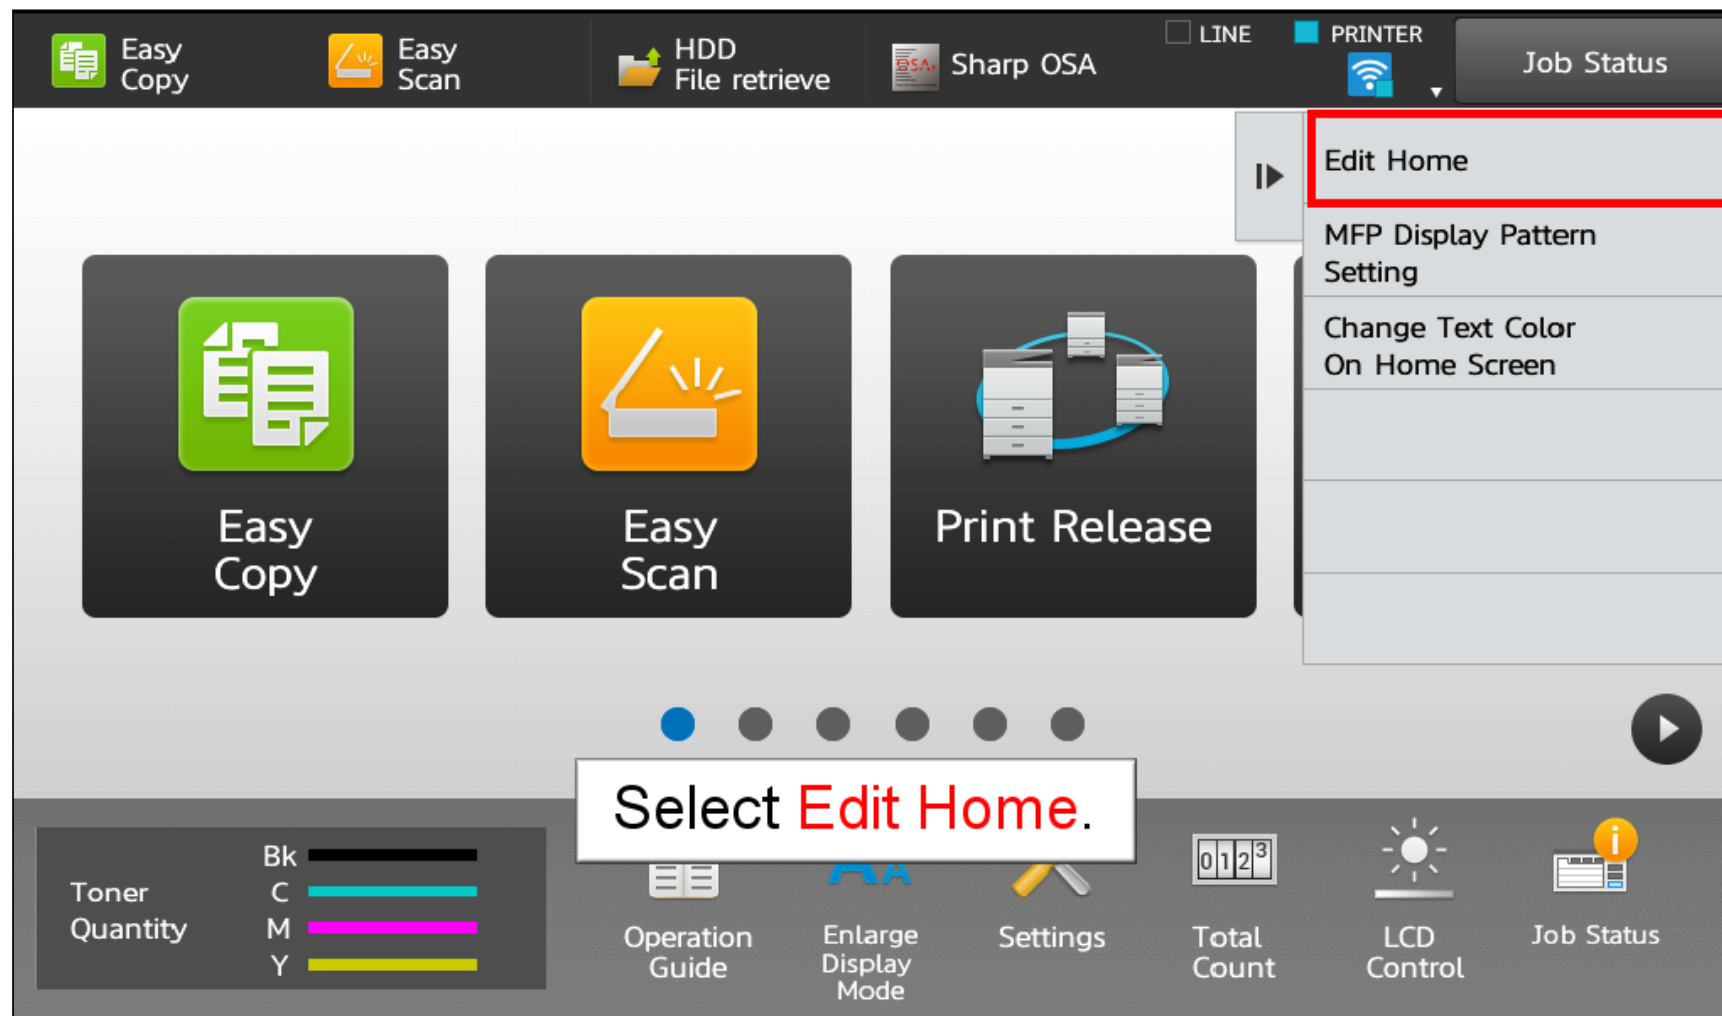

Slide 4

The image shows a software interface for a Sharp OSA device. At the top is a dark grey toolbar with several icons and labels: 'Easy Copy' (green icon), 'Easy Scan' (orange icon), 'HDD File retrieve' (folder icon), 'Sharp OSA' (Sharp logo), 'LINE' (checkbox), 'PRINTER' (blue icon), and 'Job Status' (button). Below the toolbar is a light grey dialog box titled 'Administrator Password'. Inside the dialog, it says 'Please input Admin Password. (5 or more and up to 255 characters)'. There is a text input field with a red border, and the label 'Password' is to its left. Below the input field is a white box with the text 'Select the Password text box.' in black, where the word 'Password' is in red. At the bottom left is a dark grey button with 'CA' in yellow. At the bottom right is a light blue button with 'OK' in grey. In the top right corner of the dialog box, there is a question mark icon and a blue button with a white 'X'.

Easy Copy Easy Scan HDD File retrieve Sharp OSA LINE PRINTER Job Status

Administrator Password


Please input Admin Password.
(5 or more and up to 255 characters)

Password


Select the Password text box.

CA OK

Slide 5

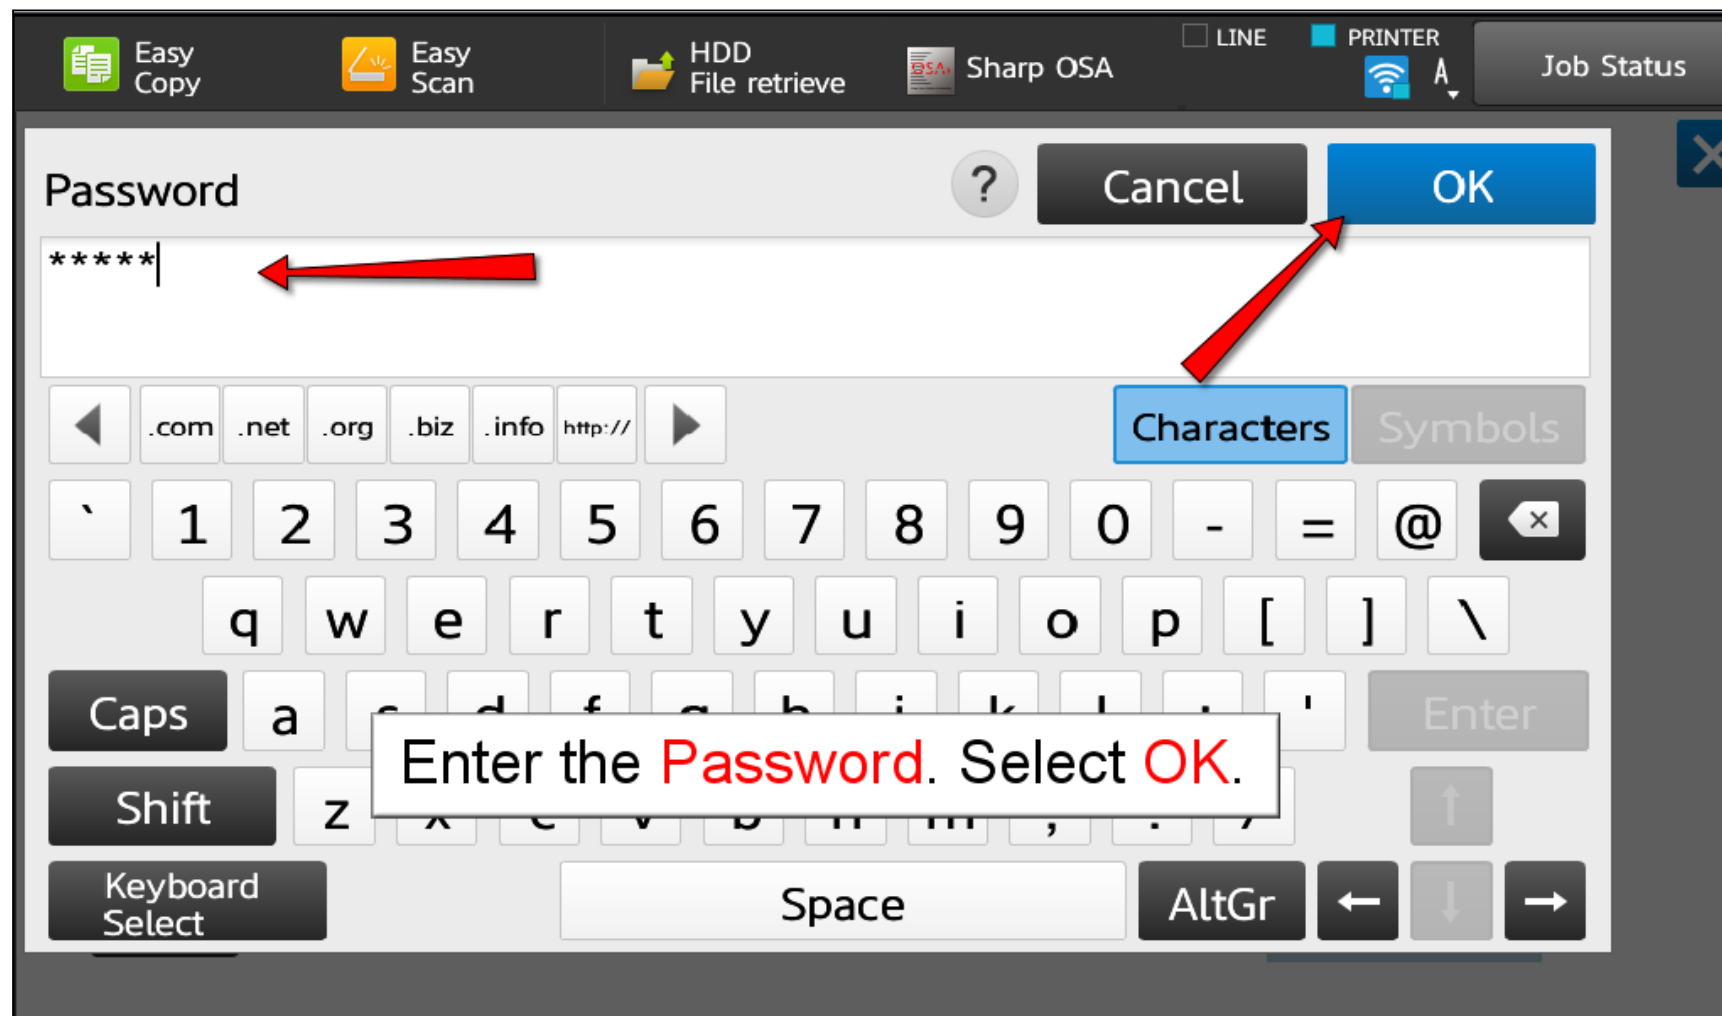

Slide 6

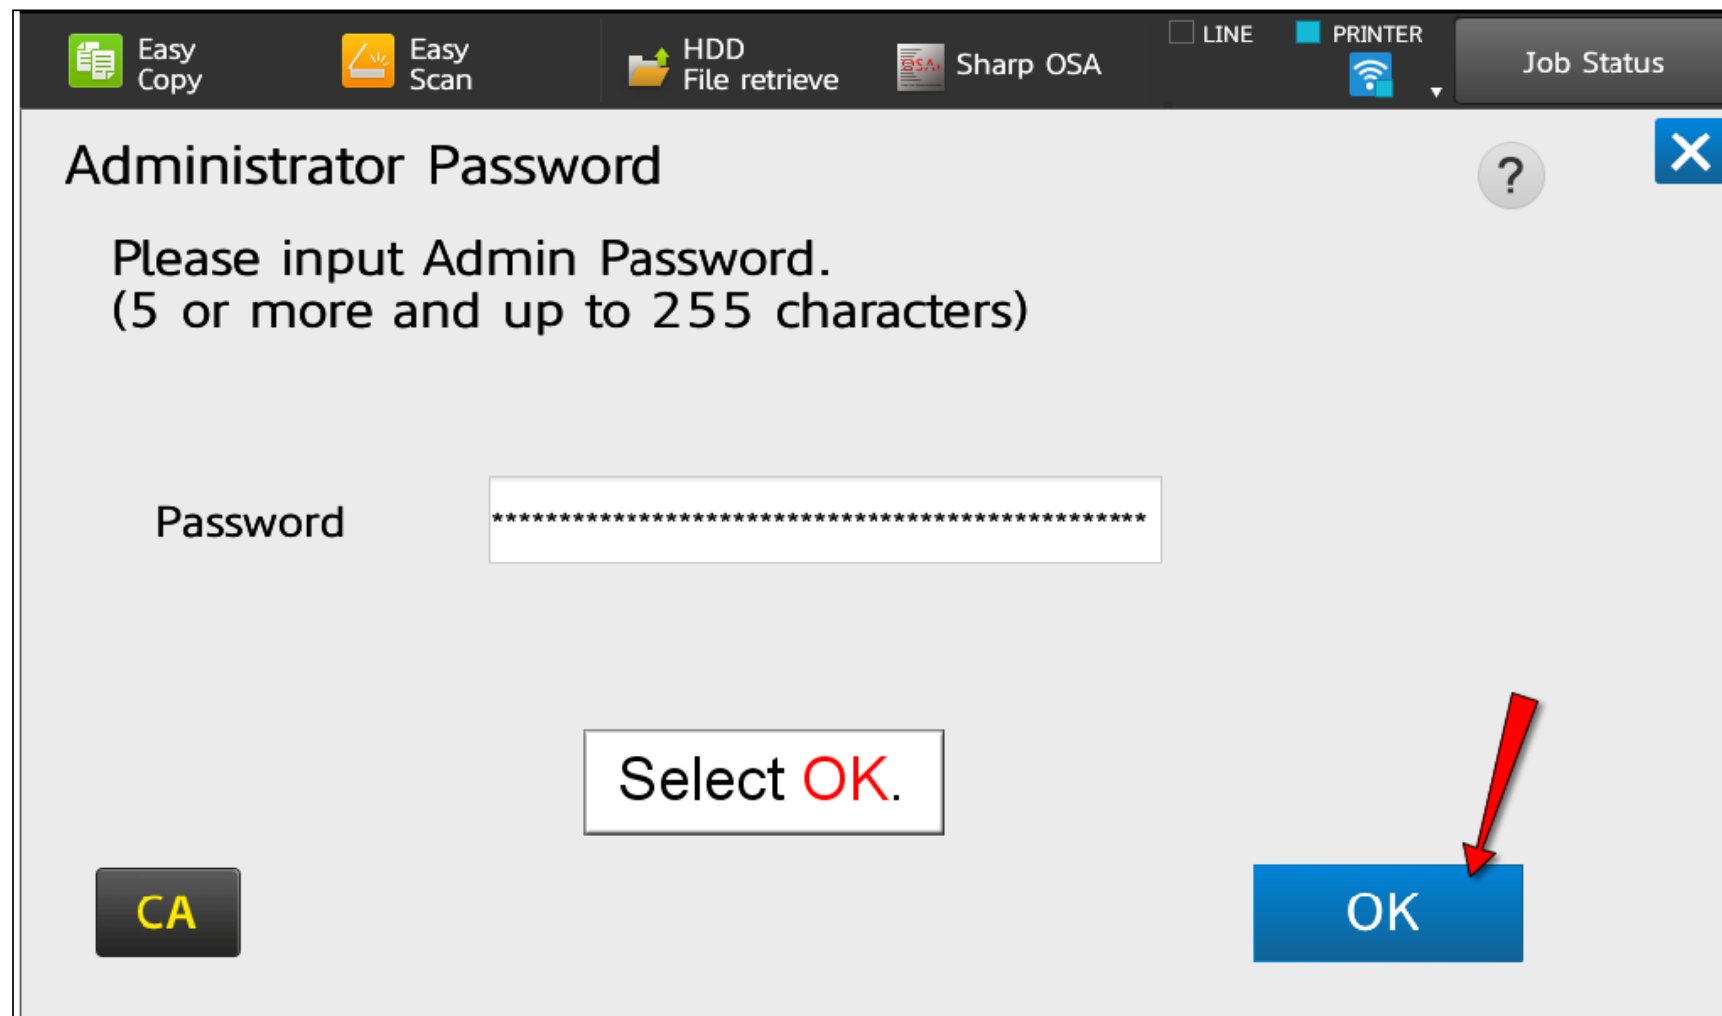

The image shows a software interface for setting an administrator password. At the top, there is a dark grey header bar with several icons and labels: 'Easy Copy' (green icon), 'Easy Scan' (orange icon), 'HDD File retrieve' (yellow icon), 'Sharp OSA' (red icon), 'LINE' (checkbox), 'PRINTER' (checkbox), and 'Job Status' (button). Below the header, the main area has a light grey background. The title 'Administrator Password' is at the top left, followed by a question mark icon and a close button (X). The text 'Please input Admin Password. (5 or more and up to 255 characters)' is centered. Below this, the label 'Password' is on the left, and a text input field is on the right, containing a series of asterisks. At the bottom, there is a 'CA' button on the left, a 'Select OK.' button in the center, and a large blue 'OK' button on the right. A red arrow points to the 'OK' button.

Administrator Password

Please input Admin Password.
(5 or more and up to 255 characters)

Password

Select OK.

CA

OK

Slide 7

Easy Copy

Easy Scan

HDD File retrieve

Logout Administrator

LINE

PRINTER

Job Status

03:04 PM

Easy Copy

Select the key to add or change.

Sharp OSA

You can now edit the Home Page Layout.

Slide 8

The screenshot shows a control panel interface. At the top is a dark navigation bar with icons and labels for 'Easy Copy', 'Easy Scan', 'HDD File retrieve', 'Logout Administrator', 'LINE', 'PRINTER', and 'Job Status'. Below this is a light gray area with a clock showing '03:05 PM' and a back arrow. The main section contains four large dark buttons: 'Easy Copy' (green icon), 'Easy Scan' (orange icon), 'Print Release' (circular printer icon), and 'Sharp OSA' (Sharp logo). Below these buttons is a horizontal row of 12 dots, with the first dot highlighted in blue. To the right of the dots is a right-pointing arrow button, which is highlighted with a red arrow. At the bottom is a dark gray bar with a trash icon on the left and a white box containing the text 'Select the right arrow.'

Slide 9

The screenshot displays the 'My Viewlet' interface. At the top, there is a navigation bar with icons and labels for 'Easy Copy', 'Easy Scan', 'HDD File retrieve', 'Logout Administrator', 'LINE', 'PRINTER', and 'Job Status'. The time '03:08 PM' is shown in the top right corner. Below the navigation bar, there are four large buttons: 'Dropbox Connector' (with a blue diamond icon), 'Copy' (with a document icon), 'E-Mail' (with an envelope icon), and 'Internet Fax' (with a globe and phone icon). At the bottom of the screen, there is a row of small circular indicators, with the second one from the left being blue. To the left of this row is a trash can icon. A red arrow points from the text box to this trash can icon. A text box at the bottom center contains the instruction: 'To Delete a Button, drag it to the Trash Icon at the bottom left of the screen.'


Easy Copy Easy Scan HDD File retrieve Logout Administrator LINE PRINTER Job Status

03:08 PM

Dropbox Connector Copy E-Mail Internet Fax

To Delete a Button, drag it to the Trash Icon at the bottom left of the screen.

Slide 10

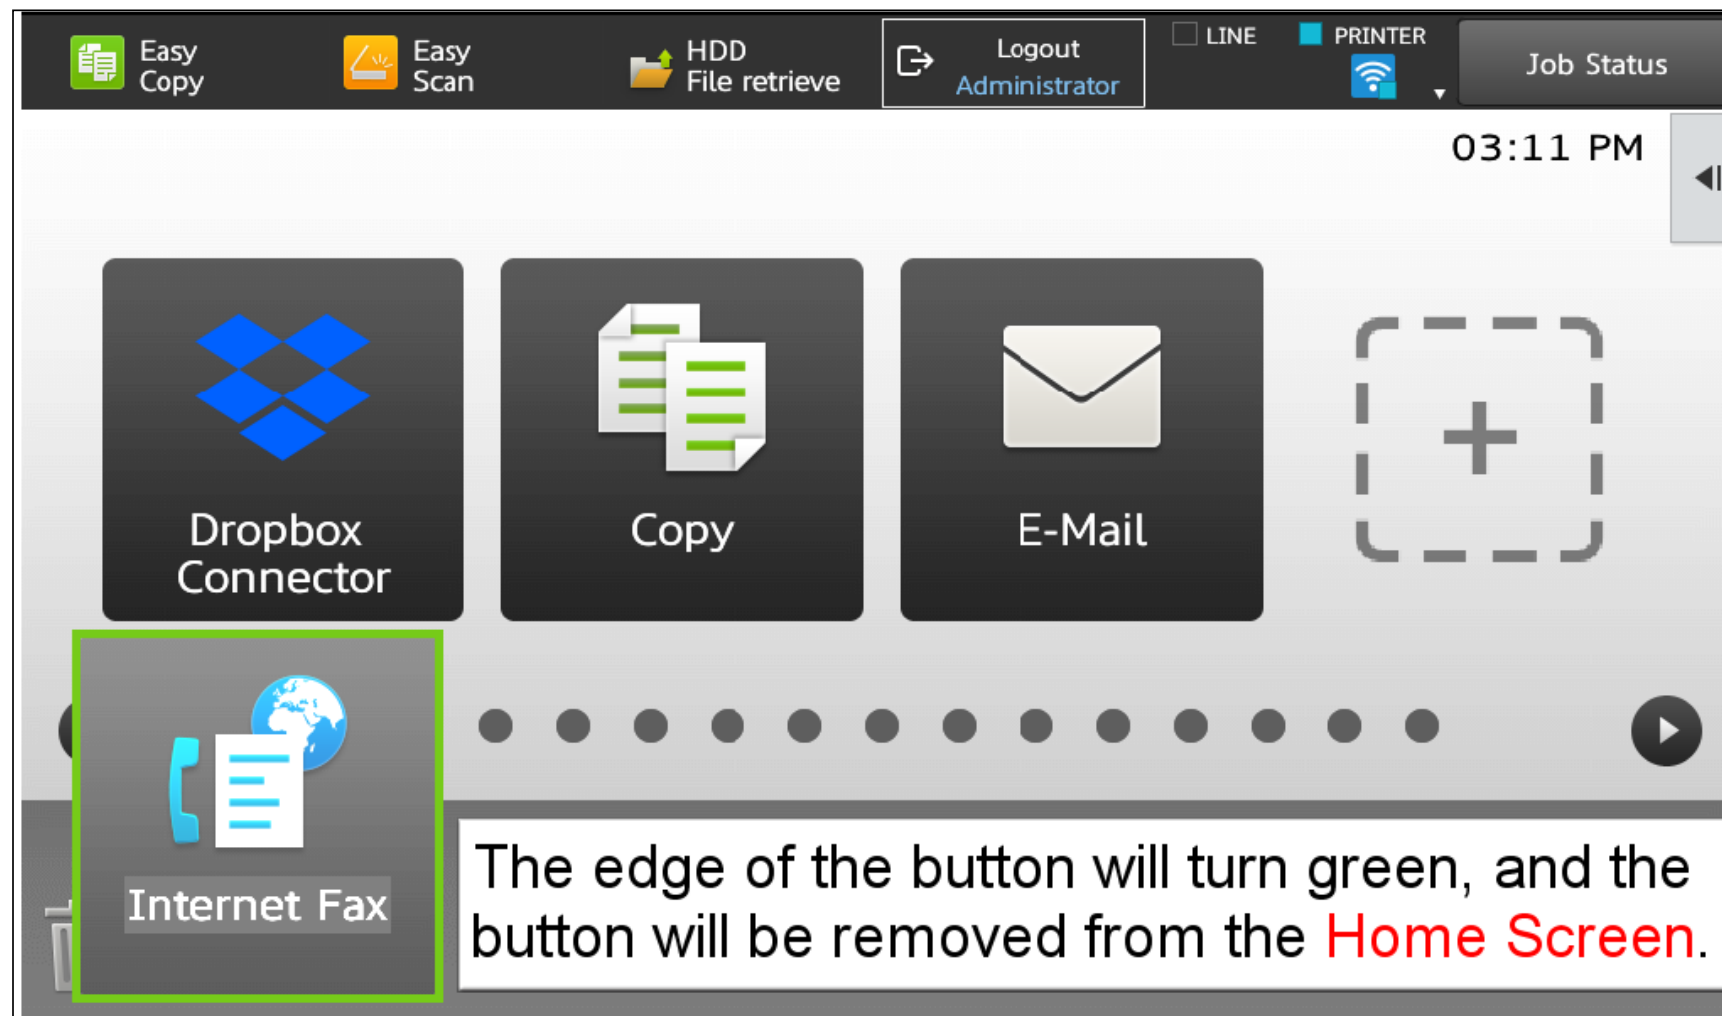


Slide 11


The screenshot displays the 'My Viewlet' interface. At the top, there is a navigation bar with icons for 'Easy Copy', 'Easy Scan', 'HDD File retrieve', 'Logout Administrator', 'LINE', 'PRINTER', and 'Job Status'. Below this, three large buttons are visible: 'Dropbox Connector', 'Copy', and 'E-Mail'. The 'E-Mail' button is highlighted with a yellow border, and a red arrow points to it. A context menu is open on the right side of the 'E-Mail' button, listing options: 'Exit Home Edit Mode', 'Delete Key' (highlighted with a red border), 'Move Key', 'Change Key Name', and 'Return Layout to Factory Default'. At the bottom, a text box contains the instruction: 'Another way to delete a button is to select the button, and select the **Delete Key**.'

Another way to delete a button is to select the button, and select the **Delete Key**.

Slide 12

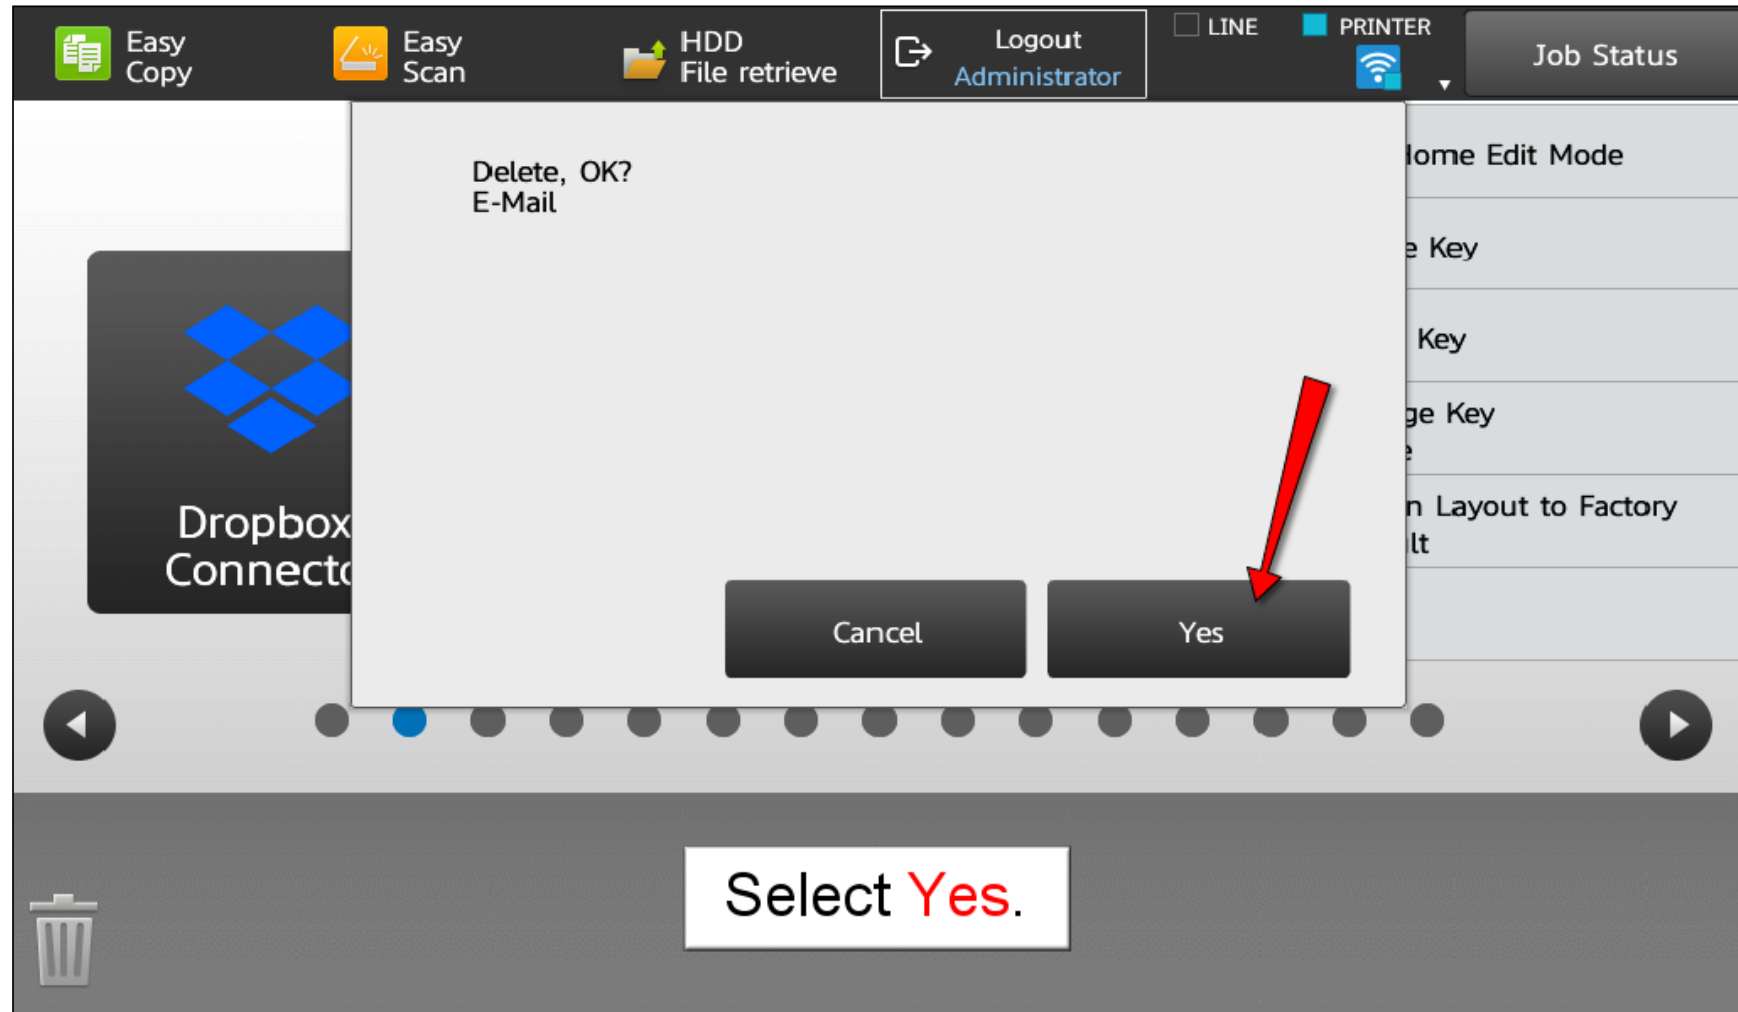

Slide 13

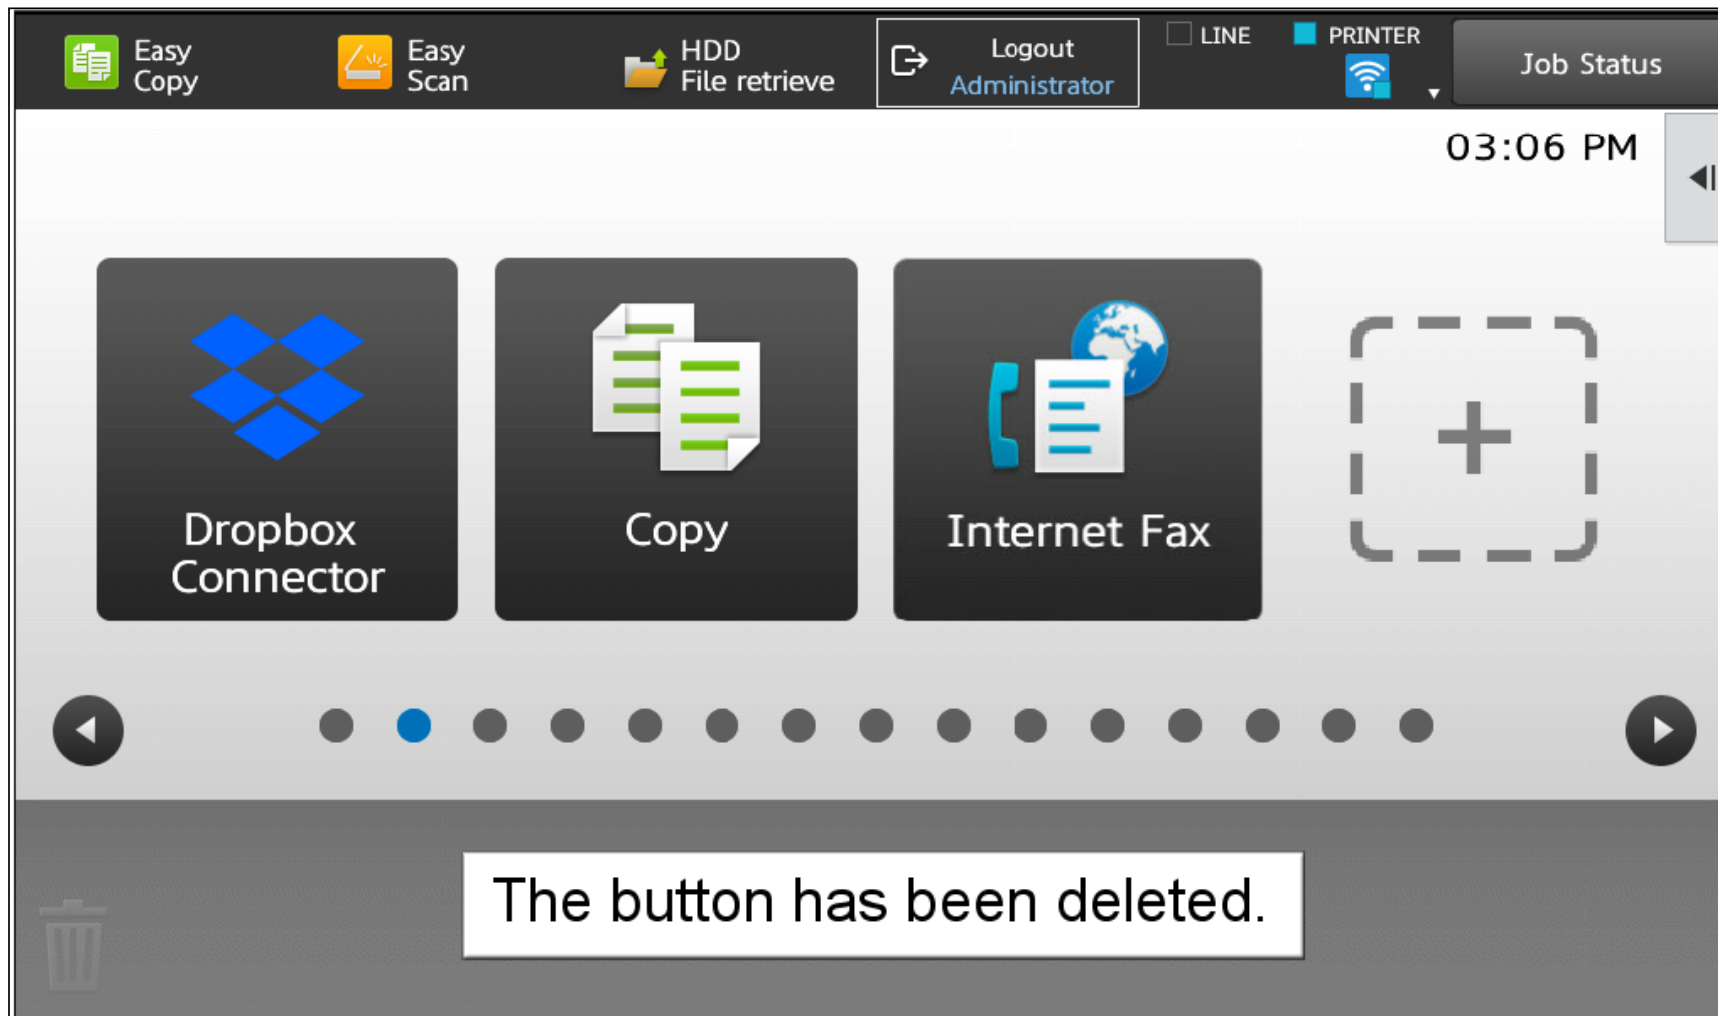

Slide 14



The slide features a dark teal background with a semi-transparent image of a business meeting. In the top left corner is the Sharp logo, consisting of a stylized 'm' and 'v' in a square followed by 'TM' and the word 'SHARP' in red. In the top right, white text reads 'Congratulations, you have successfully Deleted a Button.' On the right side is a large, white Sharp MX Series multifunction copier with a color touchscreen interface. At the bottom, two columns of model numbers are listed under the headings 'ESSENTIALS' and 'ADVANCED'.

mvTM
SHARP

Congratulations, you have
successfully Deleted a Button.

ESSENTIALS

- MX-2651
- MX-3051
- MX-3551
- MX-4051

ADVANCED

- MX-3071
- MX-3571
- MX-4071