

Slide 1



The advertisement features a dark teal background with a semi-transparent image of a business meeting. In the top left corner is the Sharp logo, consisting of a stylized 'm' and 'v' in a square followed by 'TM', and the word 'SHARP' in red below it. In the top right, the text 'Blank Page Skip.' is displayed in white. On the right side, a large, white Sharp MX Series multifunction copier is shown, featuring a large color touchscreen control panel. At the bottom, two columns of model numbers are listed under the headings 'ESSENTIALS' and 'ADVANCED'.


Blank Page Skip.

ESSENTIALS	ADVANCED
MX-2651	MX-3071
MX-3051	MX-3571
MX-3551	MX-4071
MX-4051	


Slide 2




Slide 3

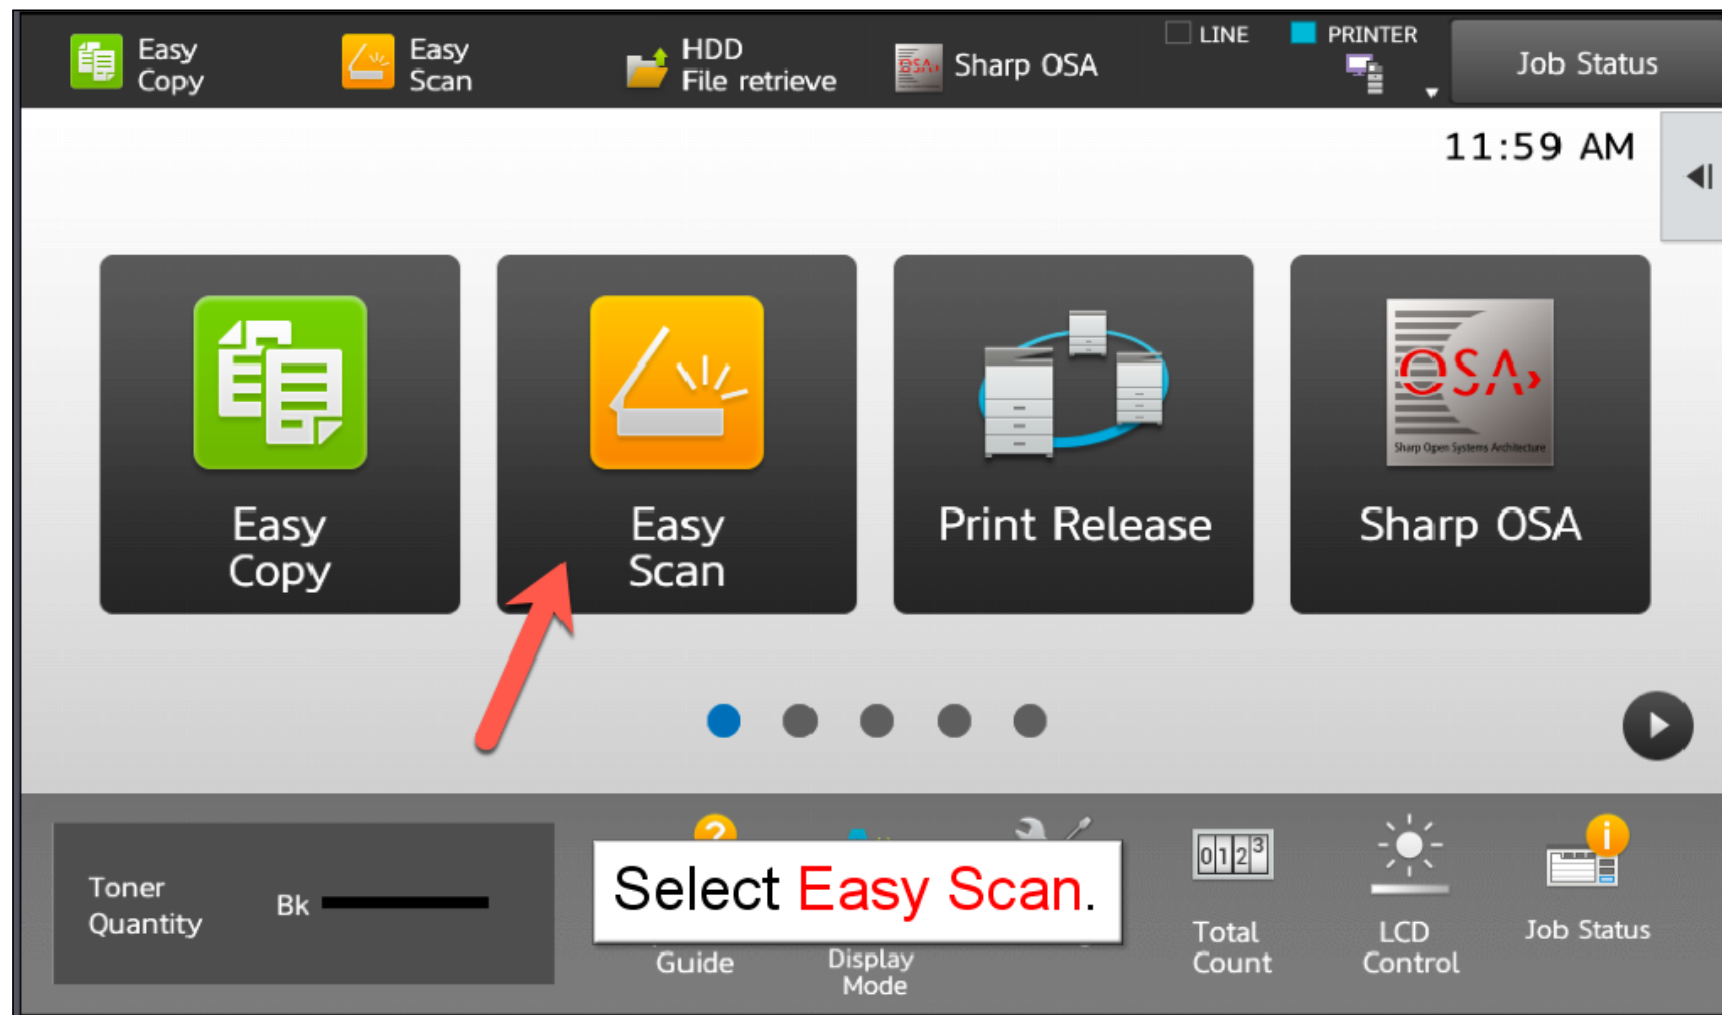


Slide 4

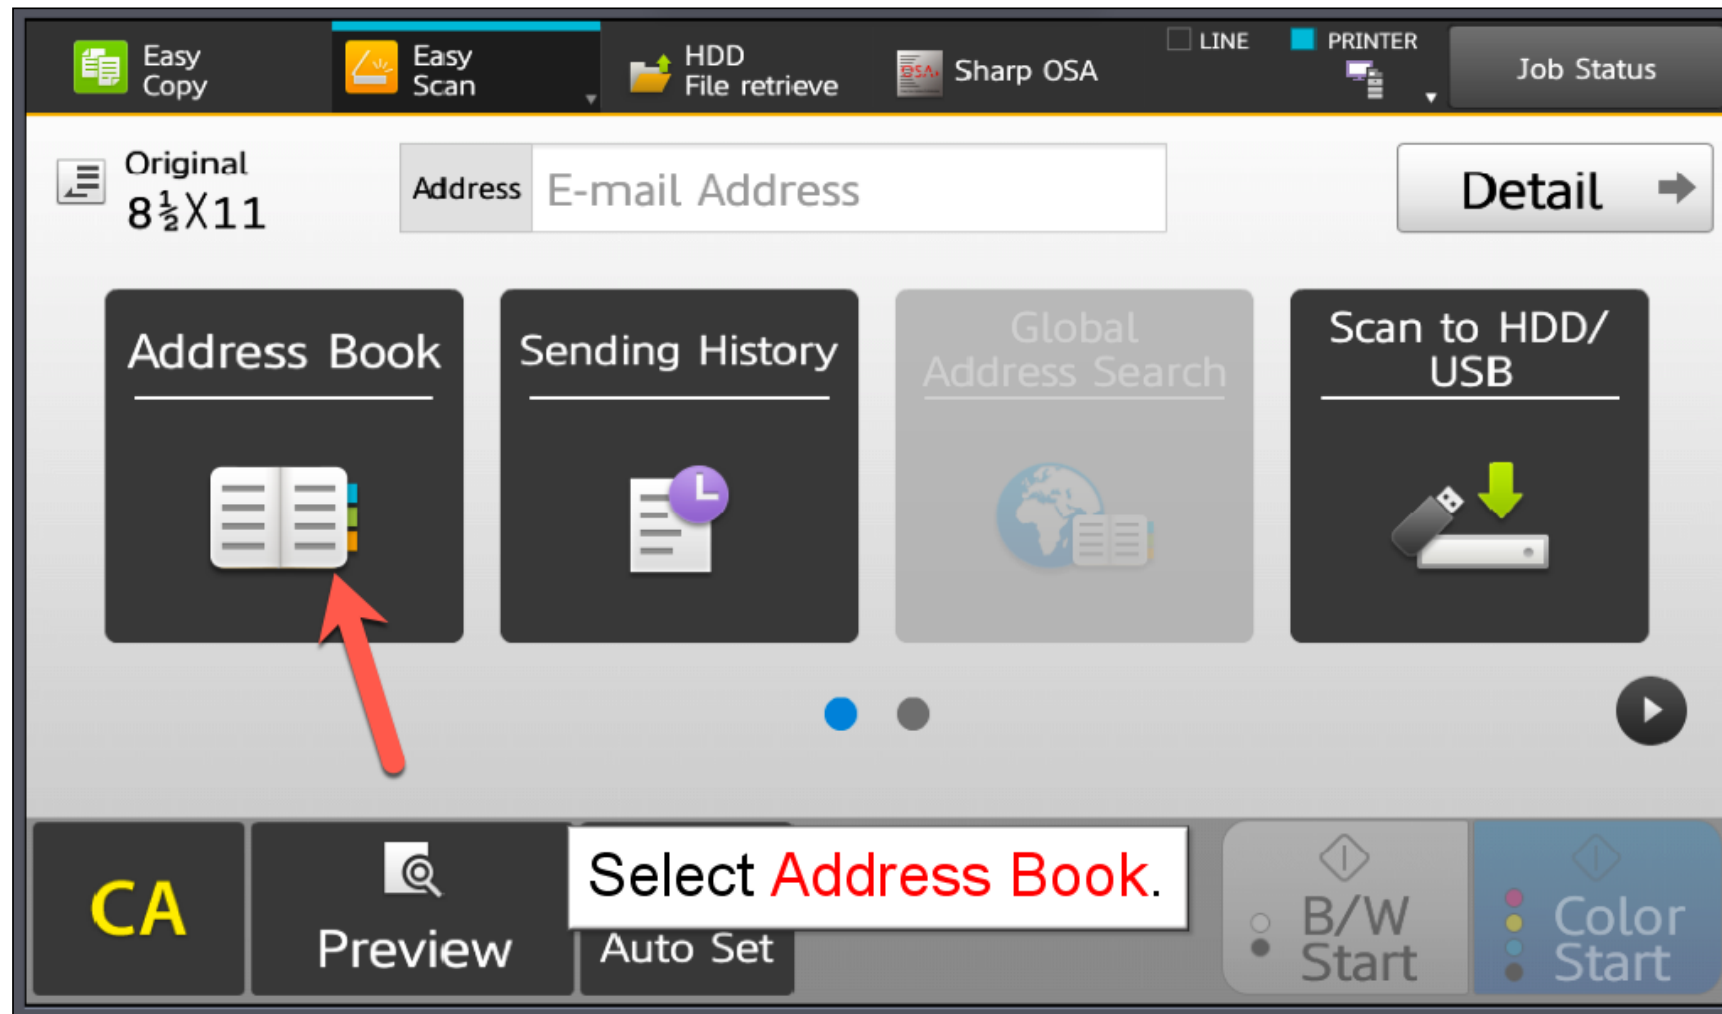


Slide 5

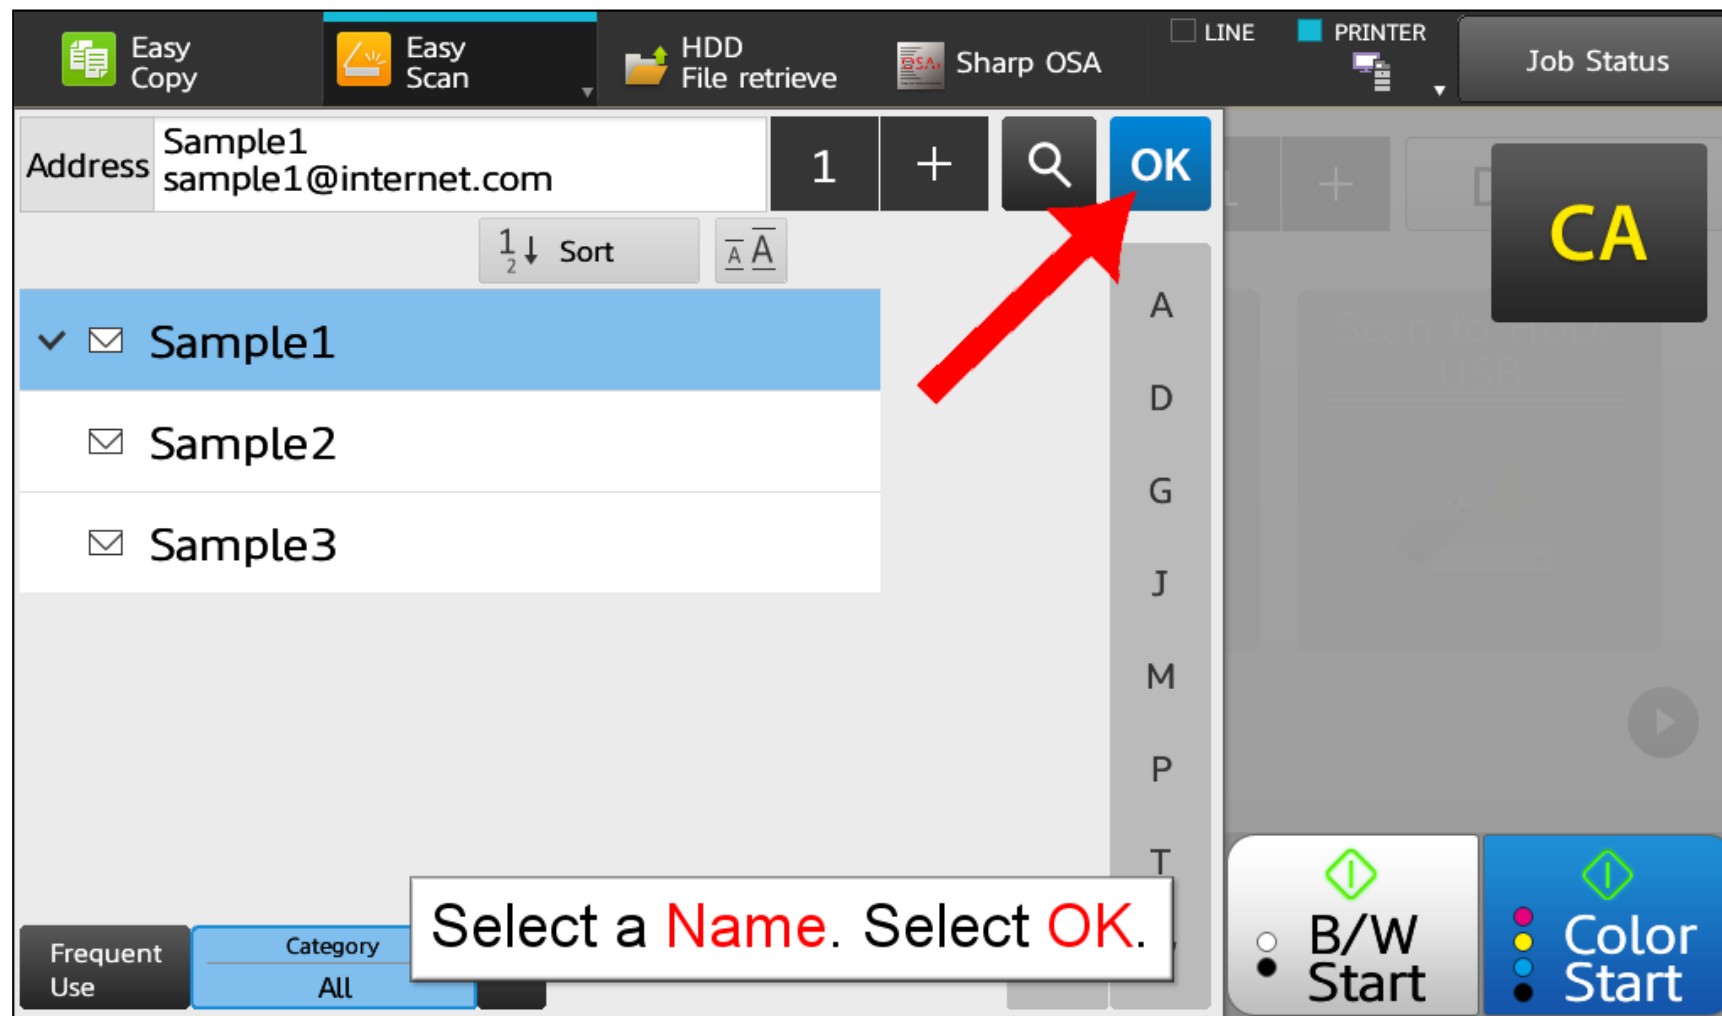


Slide 6

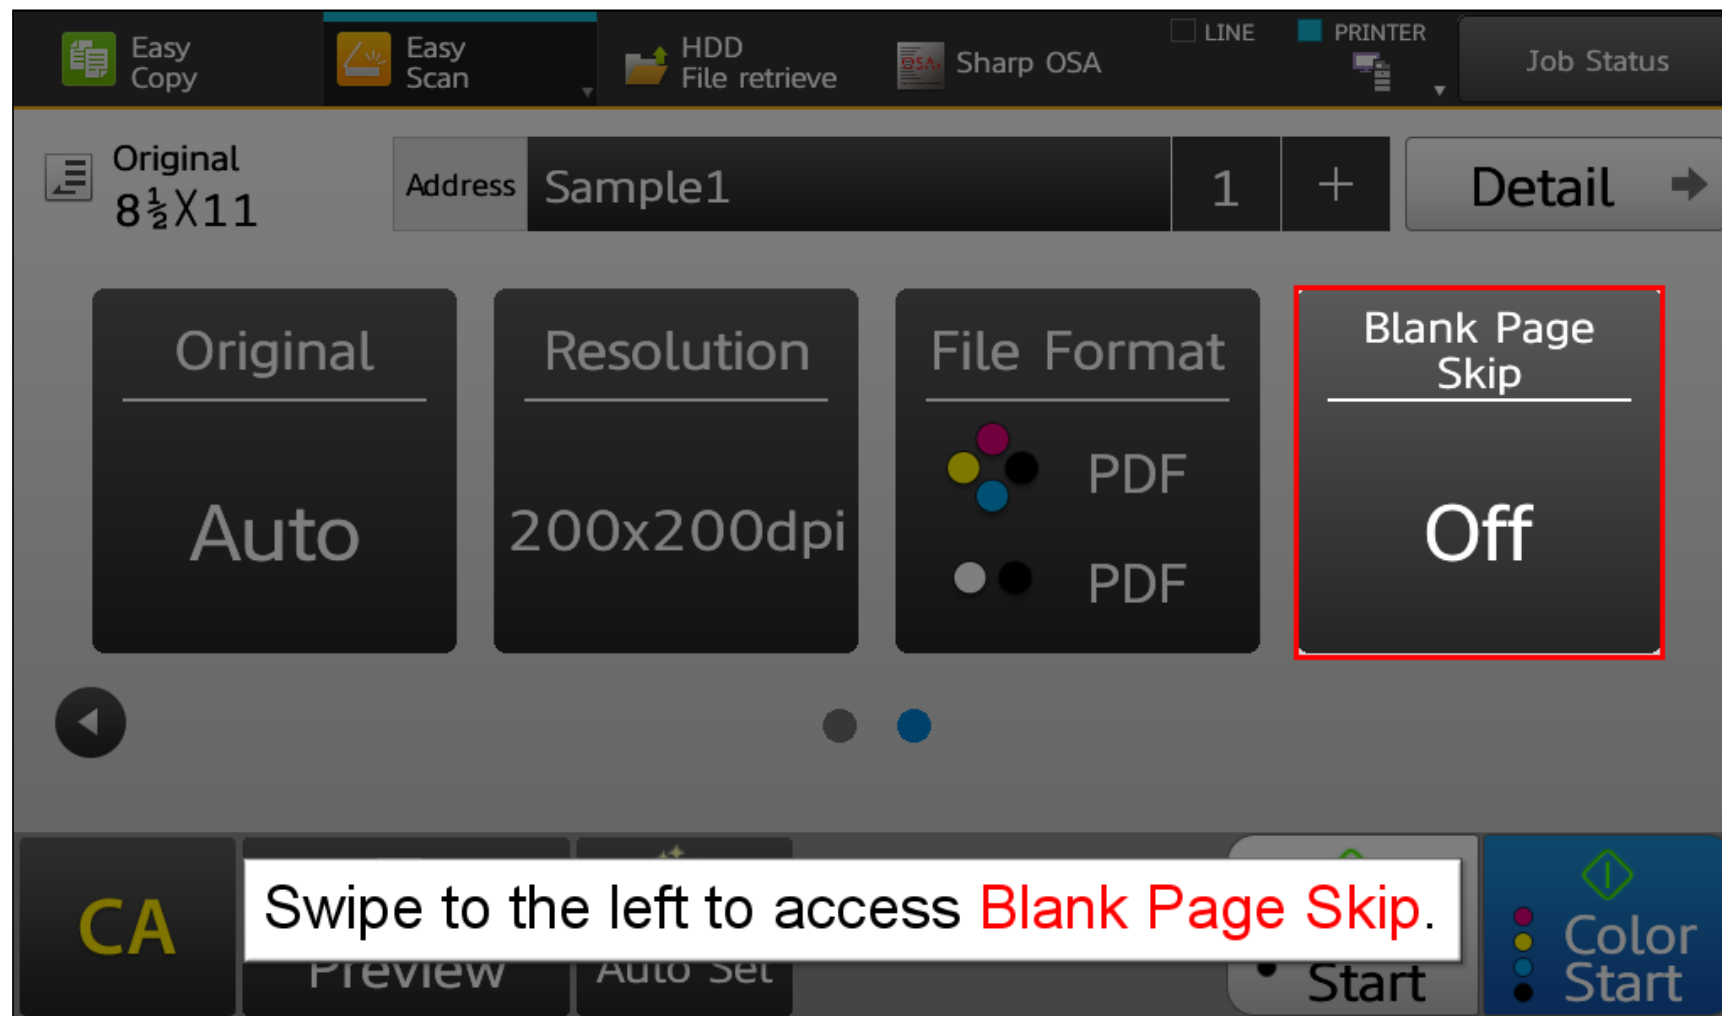


Slide 7

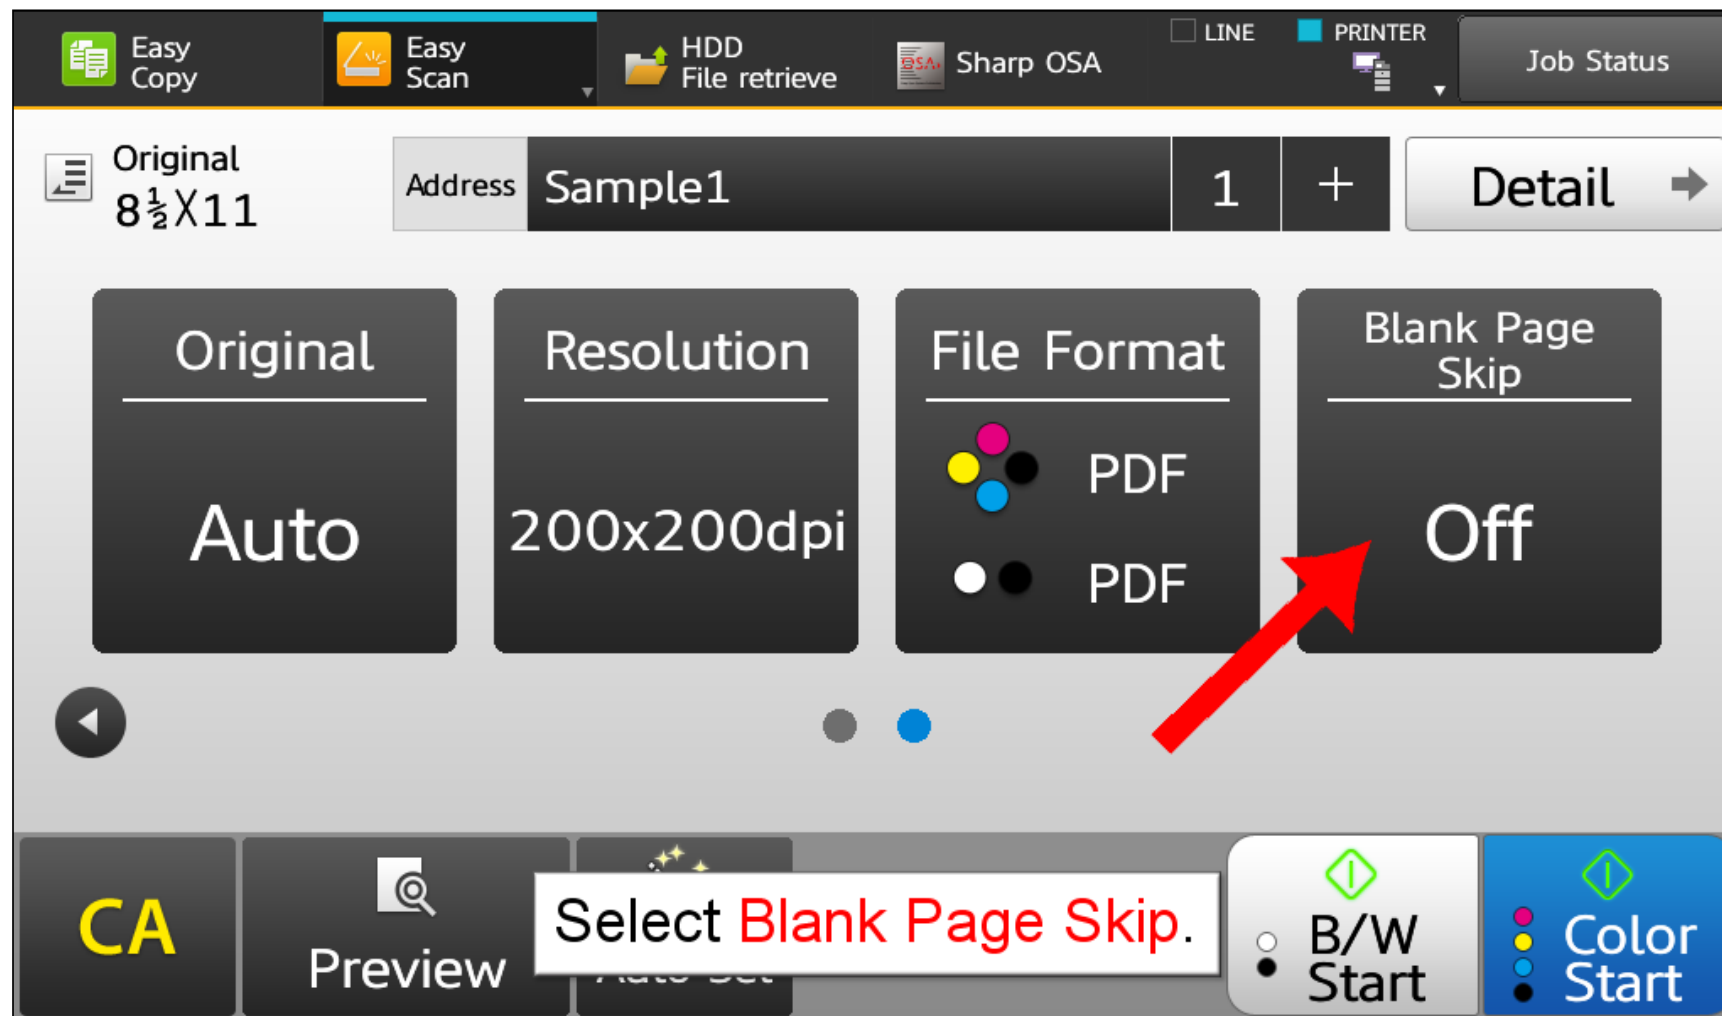


Slide 8

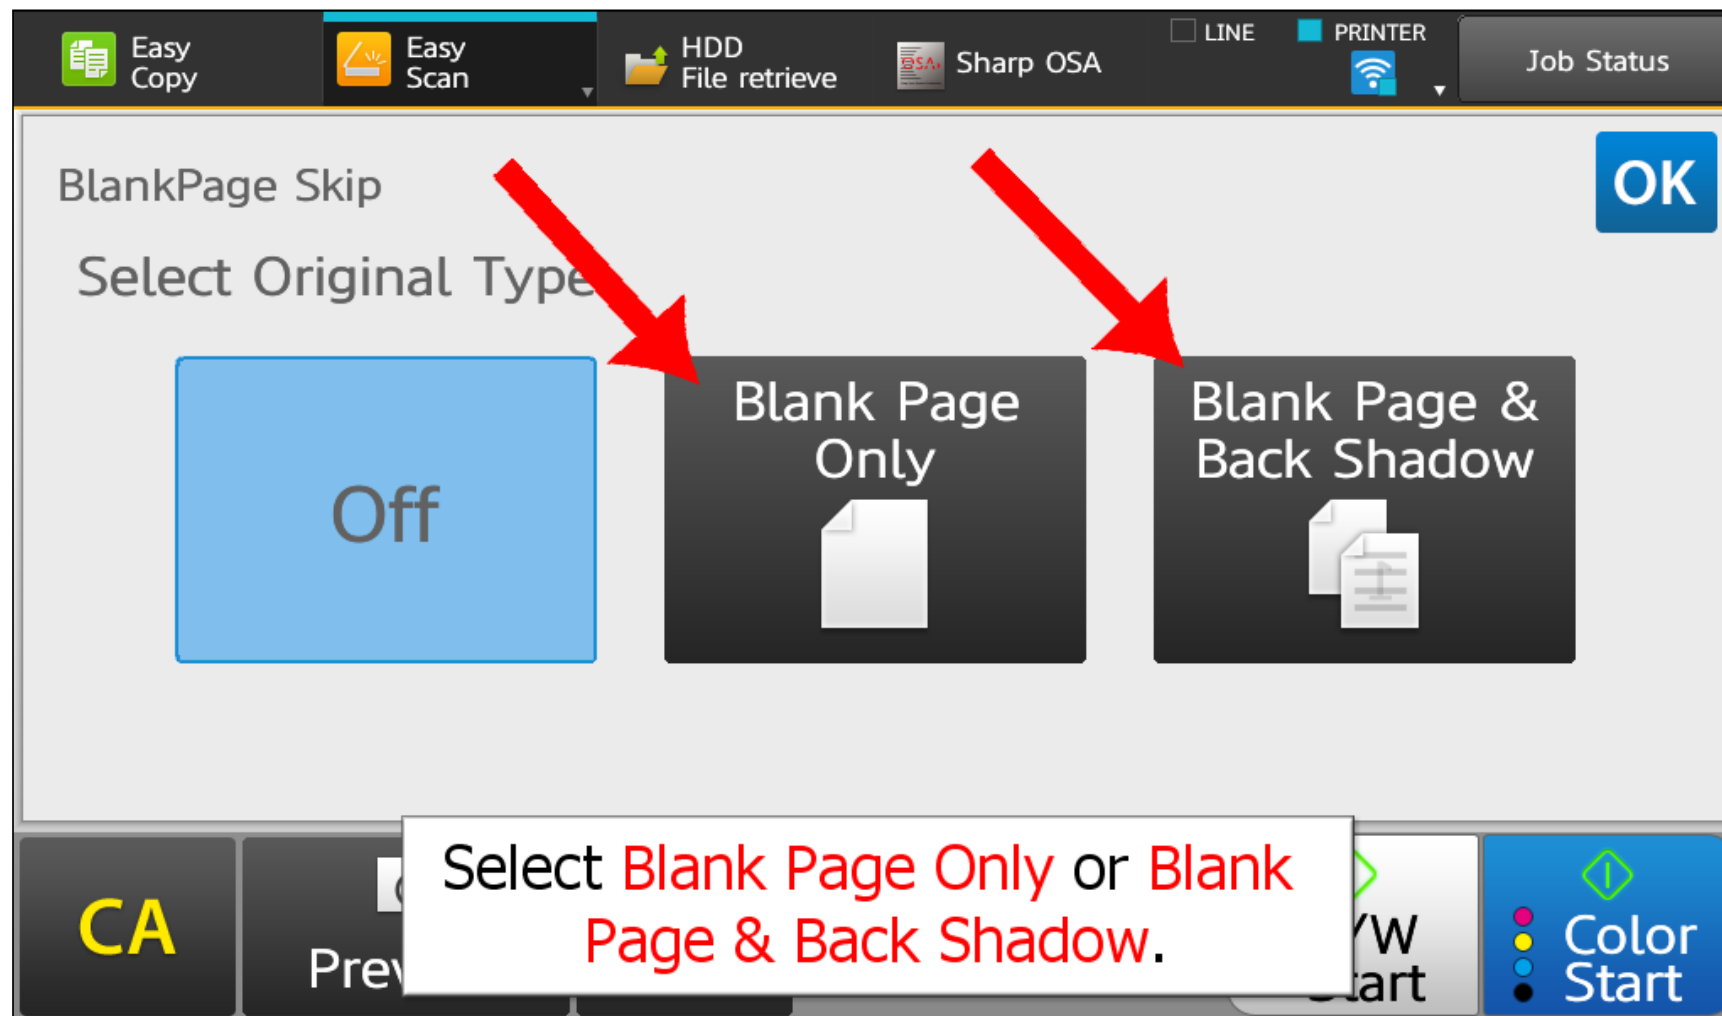

Slide 9

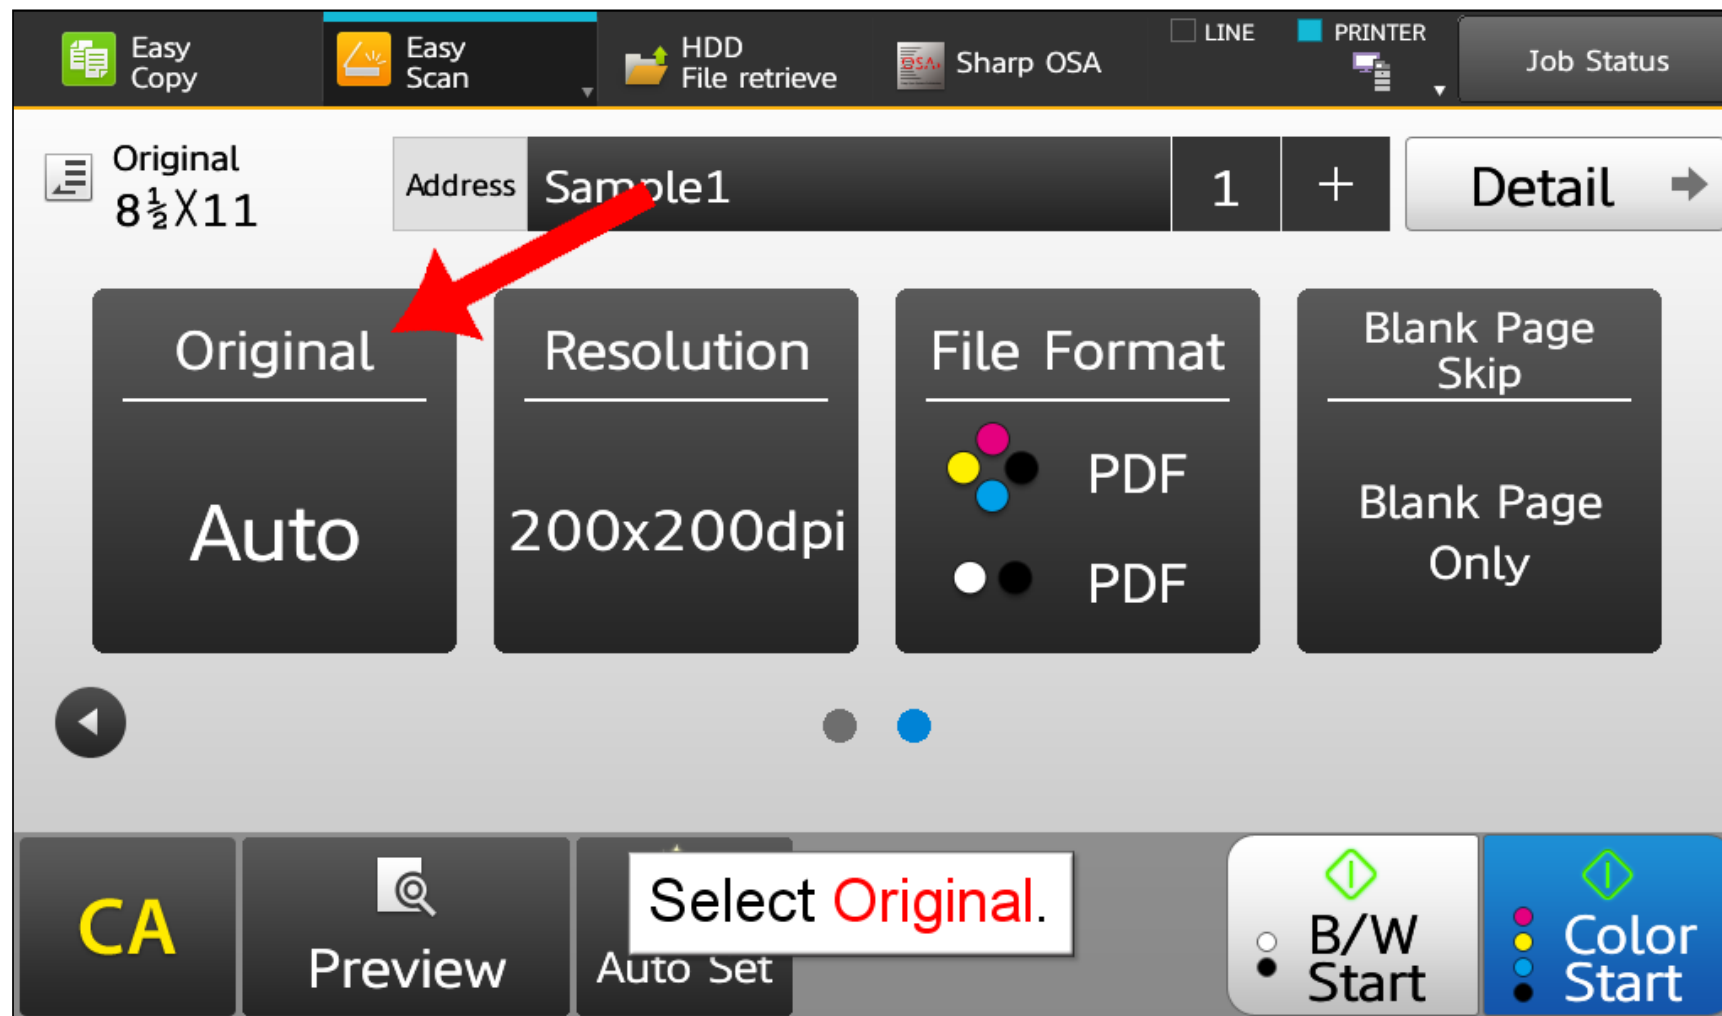

Slide 10

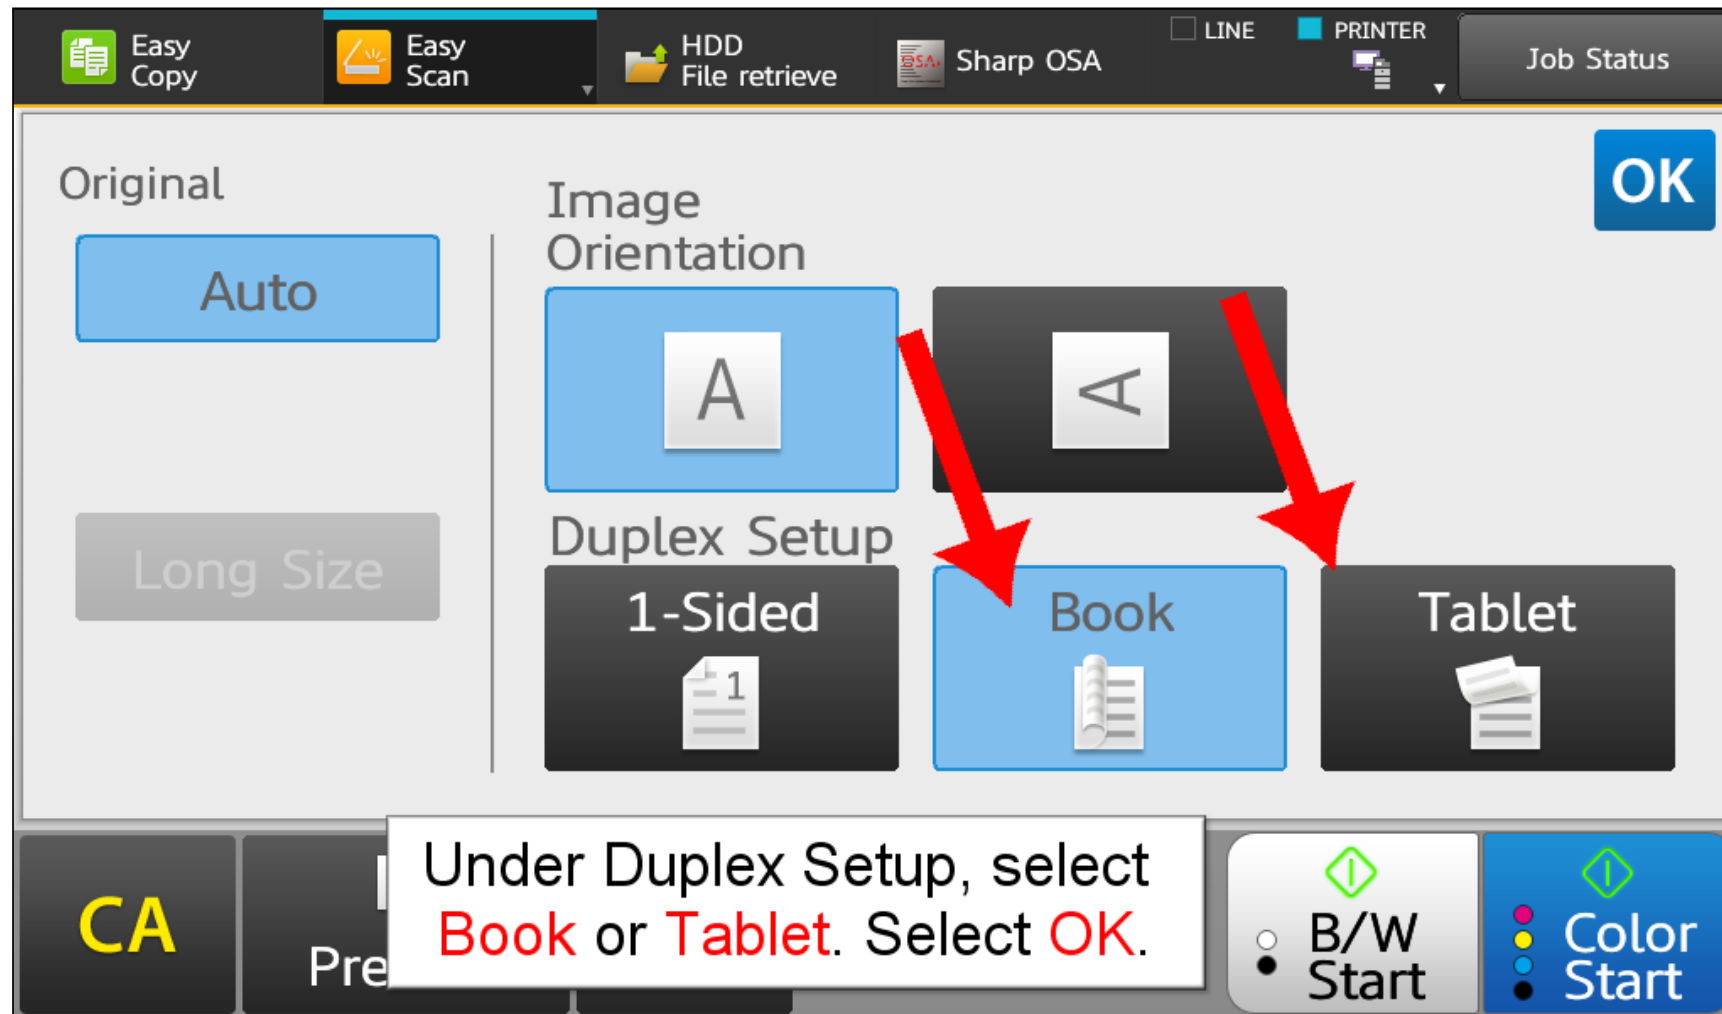

Slide 11

The image shows a scanner control interface with a top toolbar containing icons for Easy Copy, Easy Scan, HDD File retrieve, Sharp OSA, LINE, PRINTER, and Job Status. Below the toolbar, the document is identified as 'Original 8 1/2 X 11' with an 'Address' of 'Sample1' and page '1'. A 'Detail' button with a right arrow is present. The main settings area has four panels: 'Original' set to 'Auto', 'Resolution' set to '200x200dpi', 'File Format' with two 'PDF' options (one with CMYK color bars, one with grayscale bars), and 'Blank Page Skip' set to 'Blank Page Only'. A red arrow points from the 'Blank Page Only' option to the 'Color Start' button in the bottom right. The bottom bar includes 'CA', 'Preview', 'Auto Set', and two 'Start' buttons: 'B/W Start' and 'Color Start'.

Easy Copy Easy Scan HDD File retrieve Sharp OSA LINE PRINTER Job Status

Original 8 1/2 X 11 Address Sample1 1 + Detail →

Original
Auto


Resolution
200x200dpi

File Format
CMYK PDF
Grayscale PDF

Blank Page Skip
Blank Page Only

CA Preview Auto Set Select Start. B/W Start Color Start

Slide 12

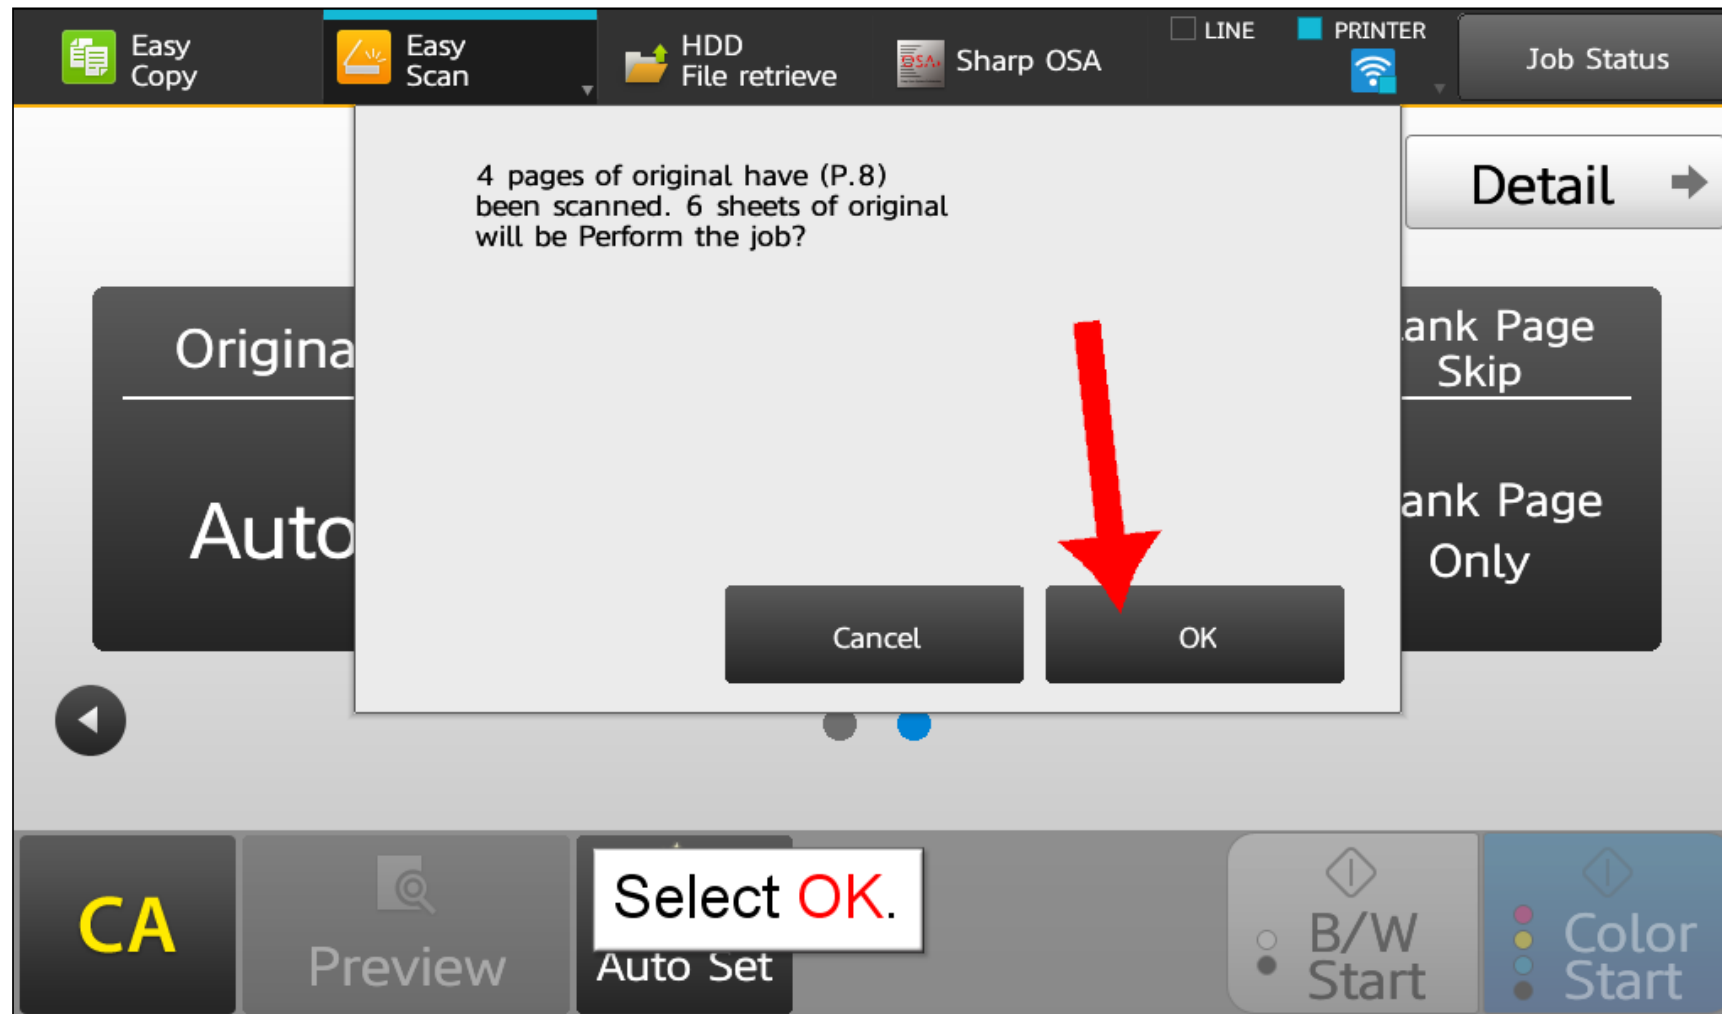

Slide 13



The slide features a dark teal background with a semi-transparent image of a business meeting. In the top left corner is the Sharp logo, consisting of a stylized 'm' and 'v' in a square followed by 'TM' and the word 'SHARP' in red. In the top right, white text reads 'Congratulations, you have used Blank Page Skip.' On the right side is a large, white Sharp MX Series multifunction copier with a color touchscreen interface. At the bottom, there are two columns of model numbers under the headings 'ESSENTIALS' and 'ADVANCED'.

ESSENTIALS

- MX-2651
- MX-3051
- MX-3551
- MX-4051

ADVANCED

- MX-3071
- MX-3571
- MX-4071