

Slide 1


# Replacing and Emptying the Ink Toner Cartridge.



The image shows two Sharp multifunction copiers, the MX-B376W and MX-B476W, in a dimly lit office environment. The copiers are white with grey accents and feature a control panel with a small screen and buttons. The background shows a blurred office scene with people working at desks. The Sharp logo and 'mv' trademark are visible in the top right corner.



MX-B376W  
MX-B476W

Slide 2

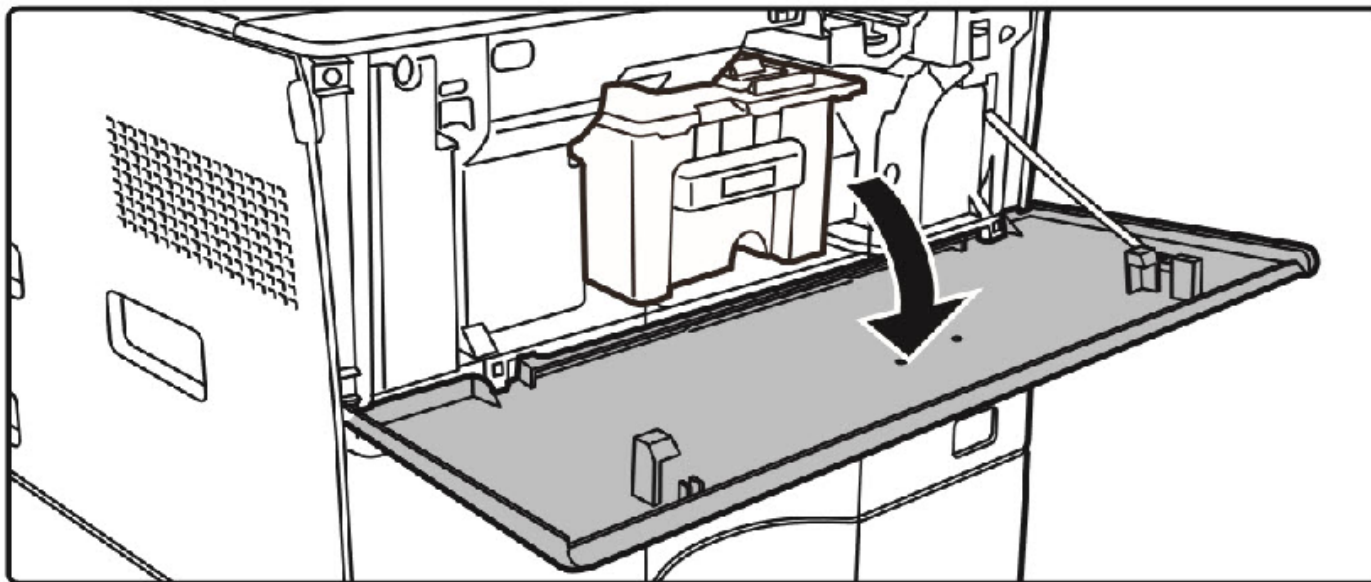


Open the **Front Cover**.

Slide 3

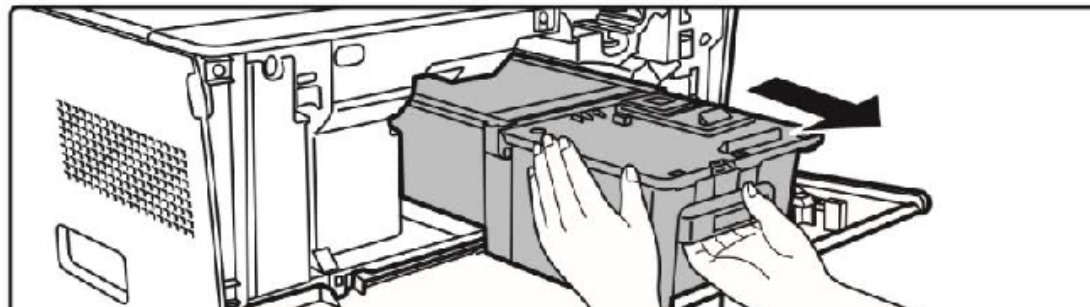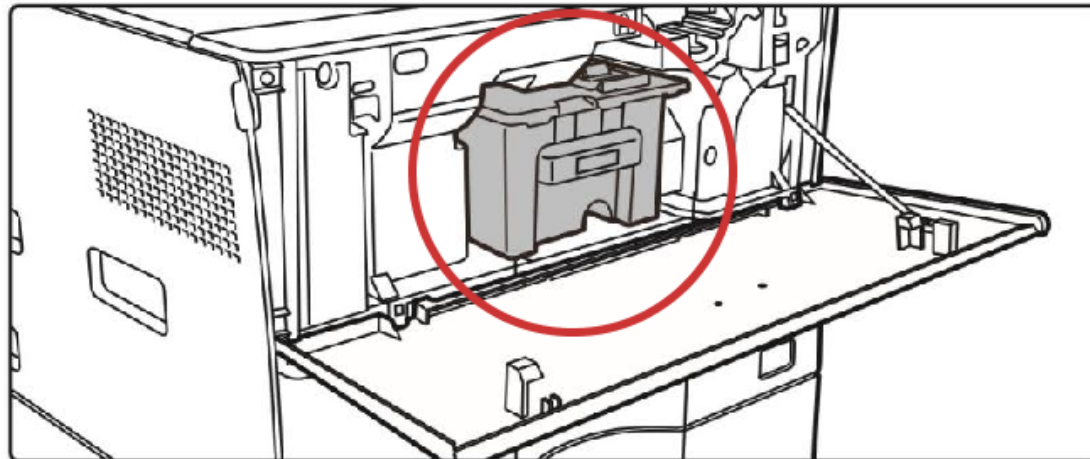


Gently pull the **Toner Cartridge** towards you, with both hands, to avoid spilling any toner.

Slide 4

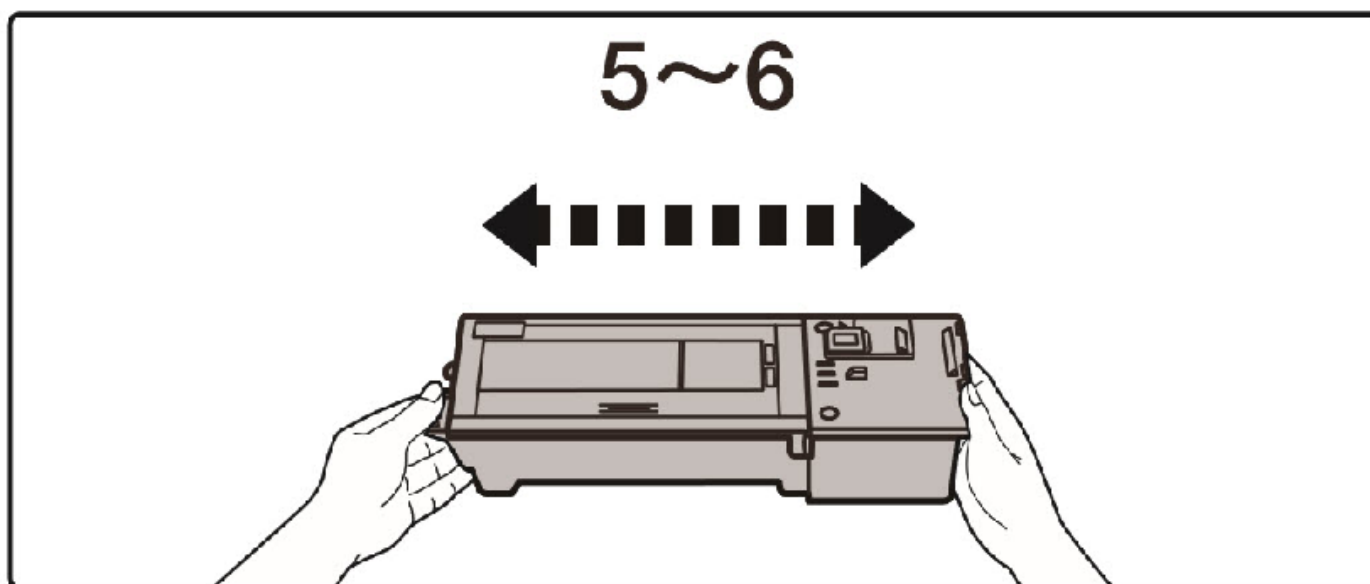


Horizontally shake the **New Cartridge** 5-6 times.

Slide 5

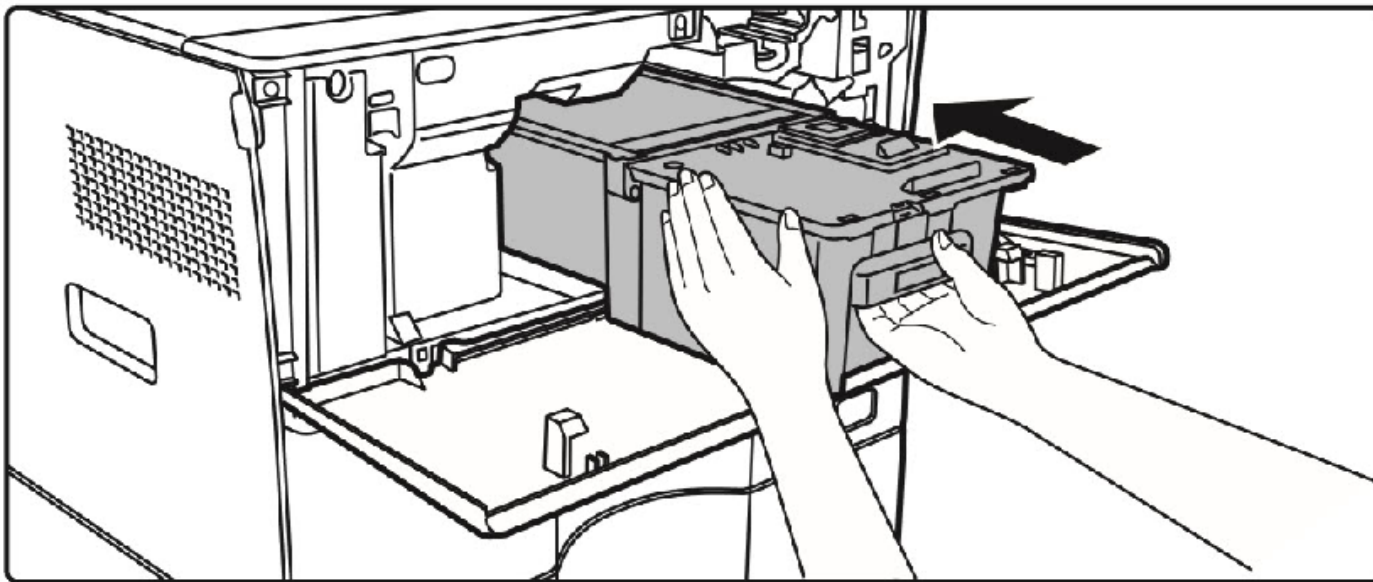


Slowly insert the **New Toner Cartridge**.

Slide 6

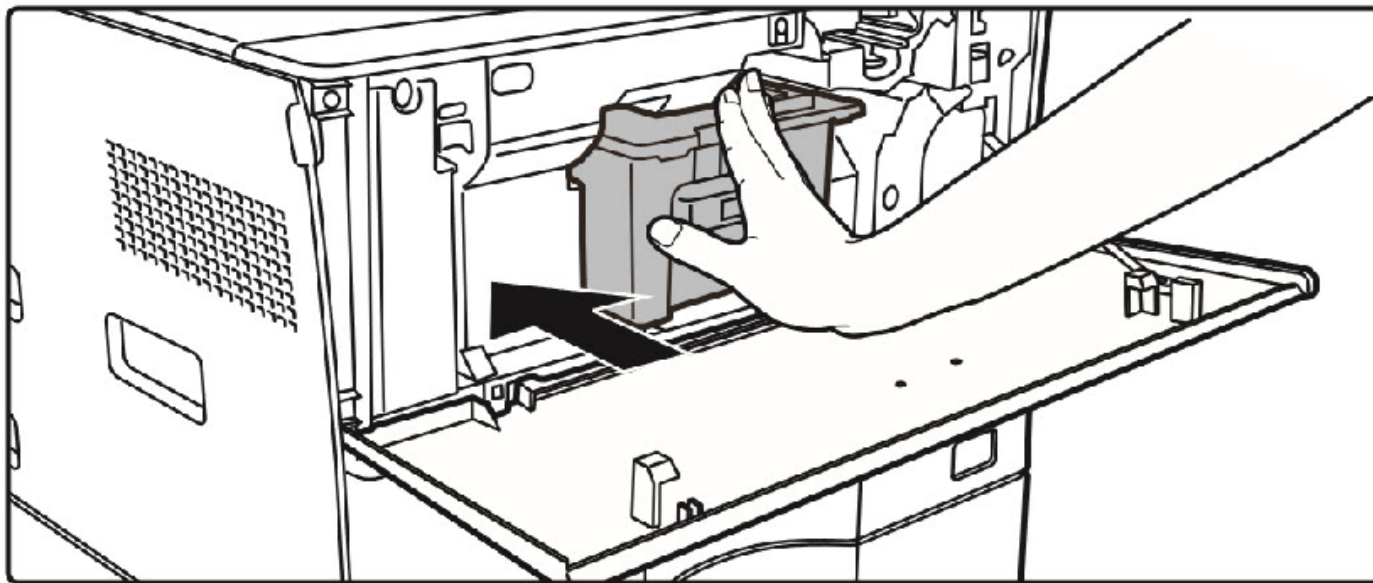

Press the **Cartridge** in firmly until you hear a "click".

Slide 7

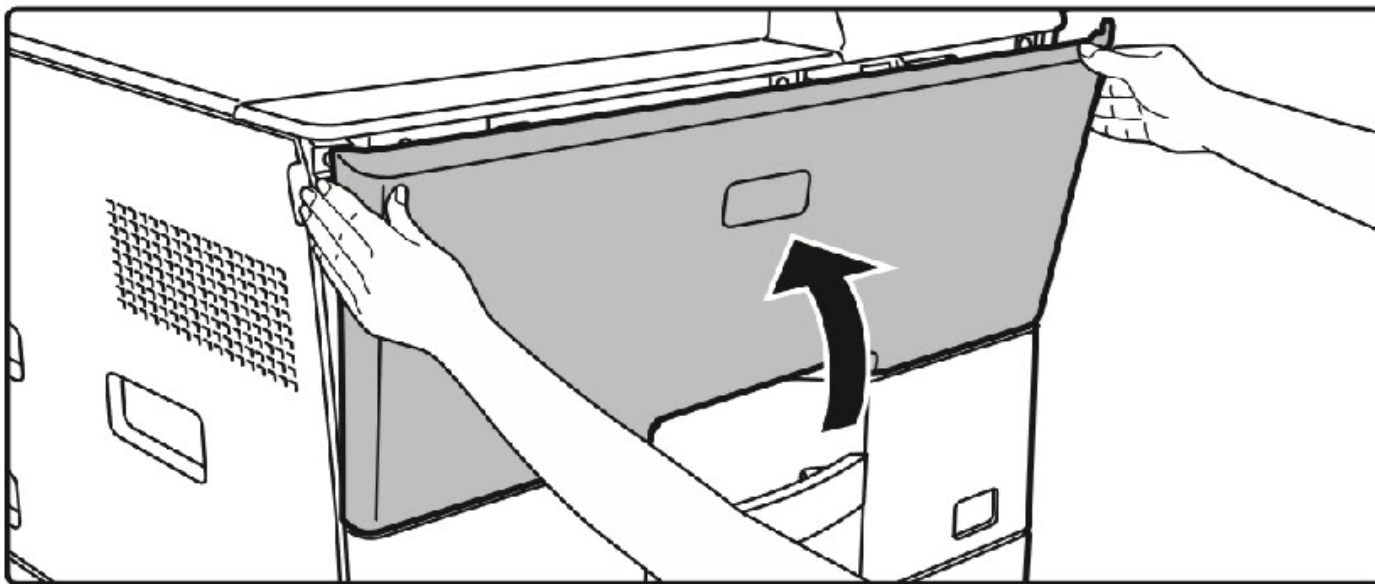

Close the **Front Cover**.



Slide 8

Congratulations, you have replaced the Ink Toner Cartridge.



The image shows two Sharp multifunction copiers, the MX-B376W and MX-B476W, in a dimly lit office environment. The copiers are white with grey accents and feature a control panel with a small screen. In the background, a man in a suit is standing and talking to two seated people at a conference table. The Sharp logo and 'mv' trademark are visible in the top right corner.

MX-B376W  
MX-B476W